valentin DRUCKSYSTEME

SPECTRA II

Interface Description

Quality . Tradition . Innovation

Copyright by Carl Valentin GmbH / 7988015A.0220

Information on the scope of delivery, appearance, performance, dimensions and weight reflect our knowledge at the time of printing.

We reserve the rights to make modifications.

All rights, including those regarding the translation, are reserved.

No part of this document may be reproduced in any form (print, photocopy or any other method) or edited, copied or distributed electronically without written permission from Carl Valentin GmbH.

Due to the constant further development of our devices discrepancies between manual and device can occur.
Please check www.carl-valentin.de for the latest update.

Trademarks

All named brands or trademarks are registered brands or registered trademarks of their respective owners and may not be separately labelled. It must not be concluded from the missing labelling that it is not a registered brand or a registered trademark.

Carl Valentin label printers comply with the following safety guidelines:

CE EG Low-Voltage Directive (2006/95/EC)
EG Electromagnetic Compatibility Directive (2004/108/EC)

REDEMAC
3540 Griffith St, Saint-Laurent, Quebec H4T 1A7
Phone: (888) 335-9570

www.redemac.com
request@redemac.com

Table of Contents

1 Serial Data Transmission 5
1.1 Connector Assignment (9-pin DSUB Socket) 5
1.2 Connection Plan RS232 6
2 Parallel Data Transmission 7
2.1 Connection Plan 7
3 Text, Bar Code, Graphic 9
3.1 Definition of Rotation 9
3.2 Definition of Datum Point 9
4 Data Format 11
4.1 Explication 12
4.2 Definition of Field Attributes/Field Properties (optional) 13
4.3 Field Name 14
4.4 Field Selection by Free Definable Field Number 18
5 Mask Set 19
5.1 Text 19
5.2 One-Dimensional Bar Code 21
5.3 ITF Bar Code 22
5.4 PDF417 23
5.5 MAXICODE 24
5.6 DataMatrix 25
5.7 GS1 DataMatrix 26
5.8 CODABLOCK F 27
5.9 GS1 DataBar (RSS Code) 28
5.10 QR Code 29
5.11 Aztec Code 30
5.12 Rectangle 31
5.13 Line 31
5.14 Internal Graphic 32
6 Text Set 33
6.1 Examples 34
7 Graphic Set 35
7.1 General Graphic Format 35
7.2 Graphic in PCX Format 35
7.3 Example PCX File 36
8 Variables 37
8.1 Set Structure 37
8.2 Link Field 37
8.3 Counter 38
8.4 Extended Counter 39
8.5 Date and Time 40
8.6 Format Identifier (Date & Time) 41
8.7 Currency Variable 44
8.8 Shift Variable 45
8.9 User Guiding 46
8.10 User Guiding with Mask 47
8.11 Memory Card Data 48
8.12 GS1-128 Parser 48
8.13 EPC Calculation (Electronic Product Code) 49
8.14 Check Digit 50
8.15 Substring 51

9 Parameter Sets 53
9.1 Label Parameters 53
9.2 Photocell 59
9.3 Printer Parameters 61
9.4 Interface 67
9.5 Network 69
9.6 Offset Values 73
9.7 Service Functions 75
9.8 Date & Time 80
9.9 Password 83
9.10 Compact Flash Card 86
9.11 Printing 90
9.12 Emulation 93
10 Parameter Sets for Options 95
10.1 WLAN (Wireless Local Area Network) 95
10.2 Cutter 99
10.3 Dispenser I/O 102
10.4 Scanner 108
11 Configuration & Status 111
11.1 Autostatus 112
12 Monitored Printing 115
12.1 Short Introduction 115
12.2 Parameter Sets (Host – Printer) 115
12.3 Direct Enquiry 116
12.4 Answer Sets (Printer – Host) 116
12.5 Sample Label 118
13 Font Examples 119
13.1 Bitmap Fonts (Not Proportional) 119
13.2 Bitmap Fonts (Proportional) 119
13.3 Vector Fonts 119
14 Index 121

1 Serial Data Transmission

1.1 Connector Assignment (9-pin DSUB Socket)

Pin	Signal	Description
2	T x D	Transmitting data line
3	R x D	Receiving data line
5	GND	GND signal
7	CTS	HW Handshake
8	RTS	HW Handshake

1.2 Connection Plan RS232

Software Handshake

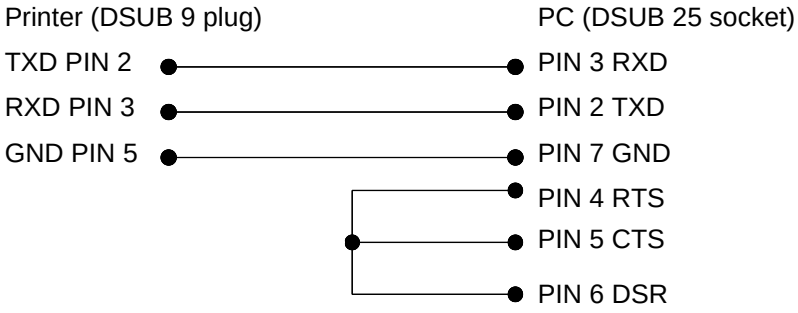

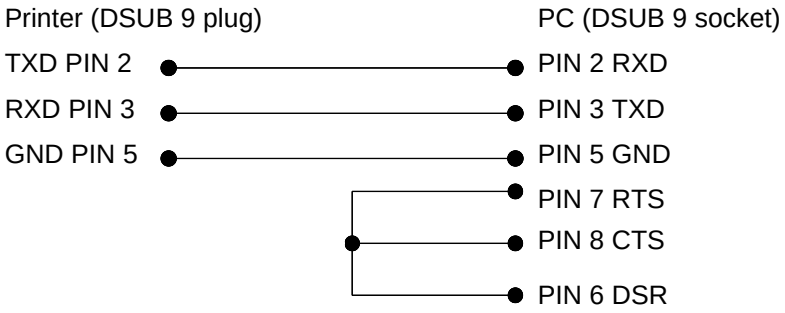

Hardware Handshake

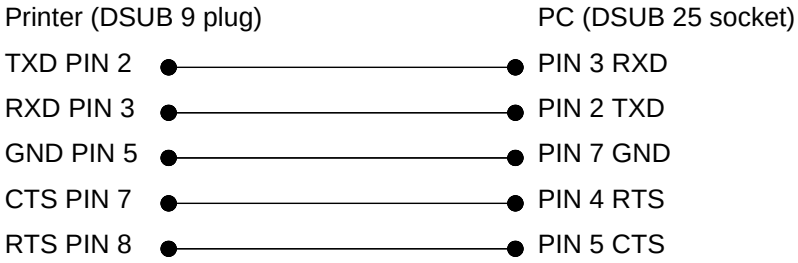

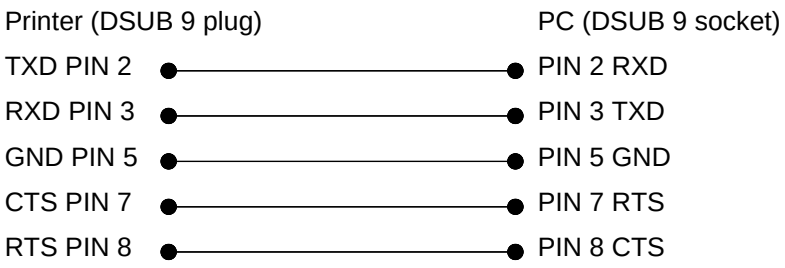

2 Parallel Data Transmission

2.1 Connection Plan

Signal Pin no.	Signal name	Direction	Function
1	$\overline{\text{STROBE}}$	(Input)	The $\overline{\text{STROBE}}$ signal indicates that data can be received. The impulse width to the receiving line has to be 0,5 µs at least.
2	DATA 0	(Input)	The signals are data bits sent to the printer. A HIGH level corresponds to logical 1 and a LOW level to logical 0.
3	DATA 1	(Input)	
4	DATA 2	(Input)	
5	DATA 3	(Input)	
6	DATA 4	(Input)	
7	DATA 5	(Input)	
8	DATA 6	(Input)	
9	DATA 7	(Input)	
10	ACK/	(Output)	An impulse of approx. 12 µs confirms data input for a LOW level and signalises the further listening watch of the printer.
11	BUSY	(Output)	A HIGH level indicates that the printer cannot receive any data. On the following conditions the signal HIGH is possible: 1) for data input (impulse for each sign) 2) during a printing process 3) in Offline status 4) for printer failures
12	PE	(Output)	A HIGH level indicates that paper is used up.
13	SELECT	(Output)	High Online
14	AUTOFEED		
15	FAULT/	(Output)	Signal goes to LOW, in case 1) the paper is used up 2) the printer is Offline or 3) an error occurs.
16	INIT/	(Input)	A LOW level initializes the printer
17	SELECTIN/	(Input)	A LOW level informs the printer to be addressed
18-25	GND		

3 Text, Bar Code, Graphic

3.1 Definition of Rotation

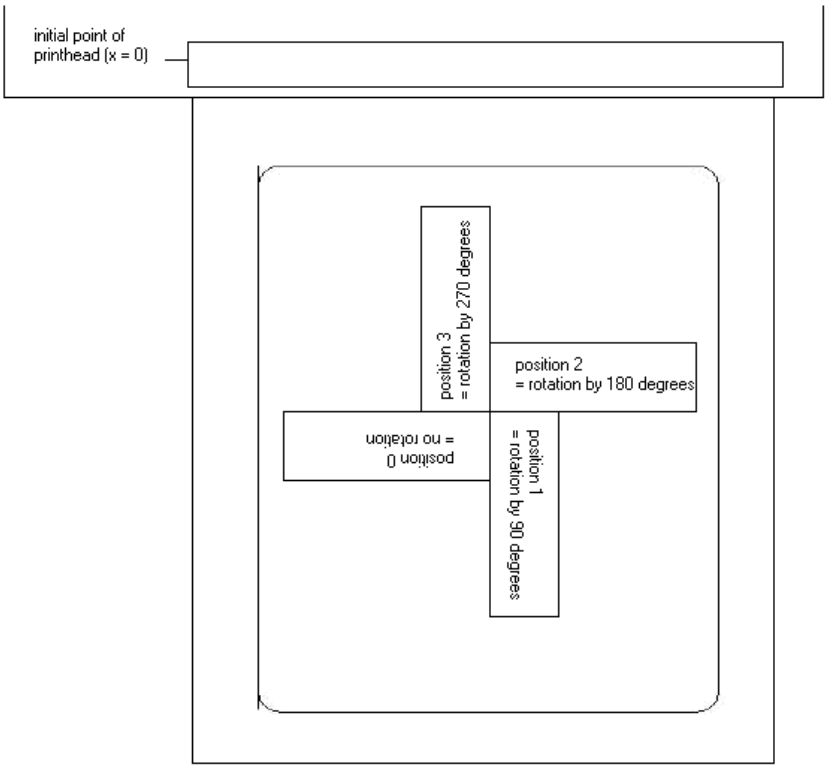

3.2 Definition of Datum Point

The so-called datum point is the relation point for indication of position. In the meantime the datum point is also the point at which the selected object is rotated.
To determine the datum point in the mask sets, the possible datum points are numbered from left top (1) to right bottom (9). The default datum point is left bottom (7). This datum point is also used even if no indication is found in the mask set.

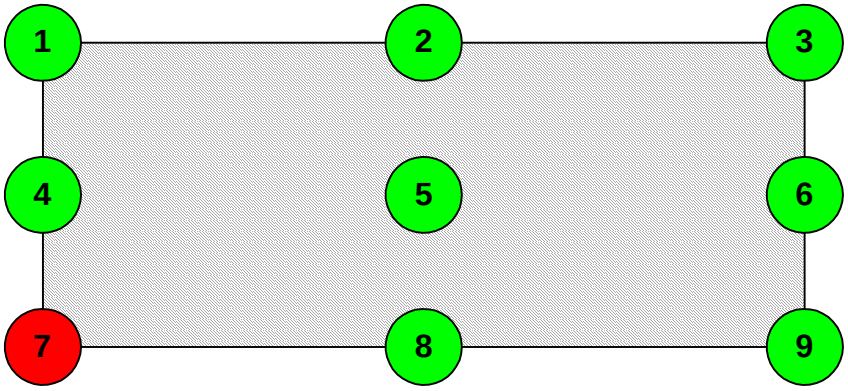

4 Data Format

The data format consists of four parties:

- Mask set
- Text
- Graphic
- Command

For a n-line label the following has to be transmitted:

- n - mask sets
- n - text sets
- n - graphic sets (if necessary)
- 1 - command set

NOTICE!

The command set always has to be transmitted at the end!

To each text on a label belong one MASK SET and one TEXT SET with the same field number.

To each code on a label belong one MASK SET, one TEXT SET and one CODE SET with the same field number.

To each box or line on a label belongs only one MASK SET.

To each graphic on a label belong several GRAPHIC SETS according to its size res. height, e.g. a graphic with a height of 10 mm needs 80 graphic sets.

Examples

Label with 3 lines of text:	3 mask sets 3 text sets 1 command set
Label with 2 lines of text, 1 box and 3 lines	6 mask sets 2 text sets 1 command set

For ALL data sets the following is valid:

Each set starts with
SOH = start of header → HEX format 01

Each set ends with
ETB = end of data transmission block → HEX-Format 17

Alternatively it is possible to set SOH to $5E_{Hex}$ and ETB to $5F_{Hex}$. This is necessary if the connected system (e.g. UNIX) cannot transfer control signs.

All other data sets → ASCII format, but they will be transmitted as hexadecimal characters.

Example

A = identification of mask set - transmission: 41_{HEX}

n = field number '01' - transmission: 30_{HEX}, 31_{HEX}

4.1 Explication

x coordinate:

Distance from right label rim in mm
Measured from the right label rim up to the lower left point of the corresponding line

y coordinate:

Distance from upper label rim in mm
Measured from the beginning of the label down to the lower left point of the corresponding line

Bitmap fonts (not proportional)

01 = Font 01	0,8 x 1,1 mm	127 characters
02 = Font 02	1,2 x 1,7 mm	255 characters
03 = Font 03	1,8 x 2,6 mm	255 characters
04 = Font 04	4,0 x 5,6 mm	127 characters
05 = Font 05	1,8 x 3,2 mm (descender)	255 characters
06 = Font 06	1,5 x 2,9 mm	127 characters
07 = Font 07	1,2 x 2,2 mm (descender)	255 characters

Bitmap fonts (proportional)

21 = Font 21	(1,0; 13)	255 characters
22 = Font 22	(1,8; 21)	255 characters
23 = Font 23	(2,6; 31)	255 characters
24 = Font 24	(5,6; 67)	255 characters
28 = Font 28	(4,0; 48)	255 characters
29 = Font 29	(0,8; 9)	255 characters

NOTICE!

In order to reach best print results it is recommended always to choose the biggest possible font.

Vector fonts (proportional)

When in mode 'proportional text', the height and width of text have to be entered in mm.
These values refer to the capital 'M', i.e. the values of other characters are changing in proportion.

Vector fonts (autoscale)

When in autoscale mode, height and width of text has to be entered in mm.
The height of the text refers to all capital letters. When using small characters and descenders the height is changing in proportion. When entering the width, the complete file has to be considered. The text will be adjusted automatically, which means that the width of the characters is changing.

4.2 Definition of Field Attributes/Field Properties (optional)

Explanation

Additionally, to mask set 'AM[ ] …' the possibility was created to define further field properties. In order to achieve a high flexibility, the field properties received own names/identifications. Therefore, the sequence as well as the number of field properties is free. If necessary, the mask set 'AC[ ]' is transferred additionally to mask set 'AM[ ]' to the printer.

Structure mask set

(SOH)AC[ ]at1=*value*;at2= *value*;…(ETB)

Attribute (at):	Description
BT BW QZ	**ITF 14 (see page 22)** bearer bar type bearer bar width quiet zone in 1/100 mm
NAME	**Field name (see page 14)** definition of field name
FN	**Field number (see page 18)** Free definable field number

This table is constantly extended. The current version is available on demand.

4.3 Field Name

Application (customized)

When label printers are connected to a computer system or machine controls, there is often the requirement that variable data is to be inserted into an existing layout. This data contents come from the superordinate computer system (database) or a machine control (e.g. PLC, scale, ERP system, etc.). Basically, it was always possible to integrate variable data into a 'loaded' layout (mask). The access to certain fields has been effected via the field index, i.e. a consecutive number. This field index is generated by Labelstar Office and can also change with layout changes, whereby the data allocation to the computer system/control is no longer correct.

Exmple

Print data

...

// TEXT (1/100 mm)

(SOH)**AM[1]2405;803;0;1;2;4;1;1;0**(ETB)

(SOH)**BM[1]Feld 1**(ETB)

// TEXT (1/100 mm)

(SOH)**AM[2]421;856;0;1;2;4;1;1;0**(ETB)

(SOH)**BM[2]Feld 2**(ETB)

// LINES: 2

...

The print data contains the definitions for the two text fields. The field index is always in **'[ ]'** of the mask or text setting.

If the text field 'Feld 1' is deleted on the label and then recreated, it gets a new index. In this case '2'. The text field 'Feld 2' gets the index '1'. As a result, an assignment via the field index is used only to a limited extend, without manual post-processing of the layout data.

Explanation

As an alternative to the field index, the assignment can also be made via the field name. A change in the field index has no longer any influence, and a changed layout is still filled in the right places with variable data of the computer system/control system.

Labelstar Office: The print data is supplemented by the following line:

(SOH)**AC[1]NAME="*Field name*"**(ETB)

The field content defined via the text block can be changed by the computer system/control with the following command:

(SOH)**BV[*Field name*]Feld 2**(ETB)

This results in the following standard procedure for the connection to a high-level control and/or computer system.

Label design with Labelstar Office

The field names are automatically transferred by Labelstar Office.

The desired field name (Field1) is entered in the properties of the text field.

For text fields, a printer-internal font must be used. The printer-internal fonts are marked by a printer symbol in the list.

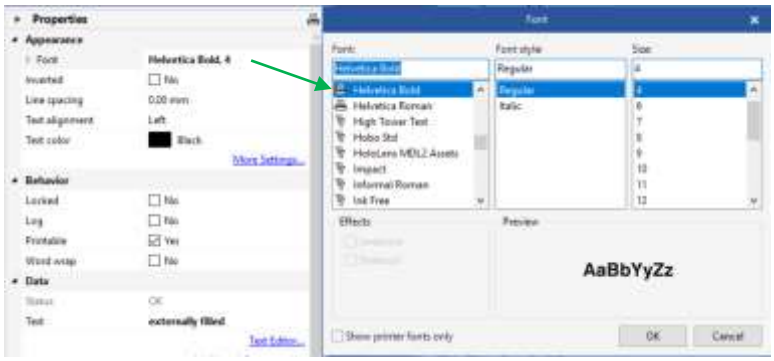

Export to a print file and save the layout in the external controller

When the label design is finished, the label is exported to a print file. For this, Labelstar Office uses the function **File – Export – Create Print Template**.

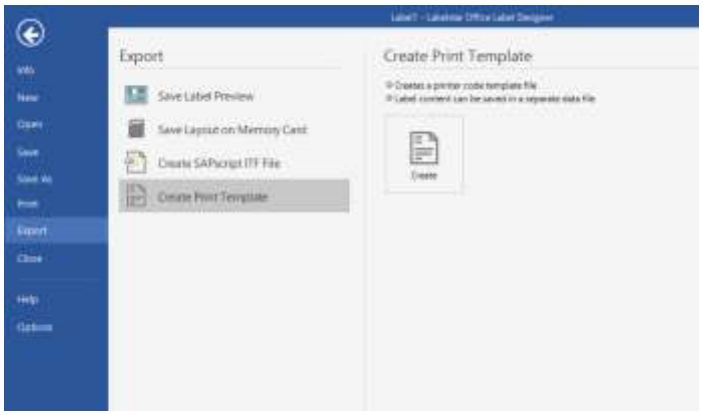

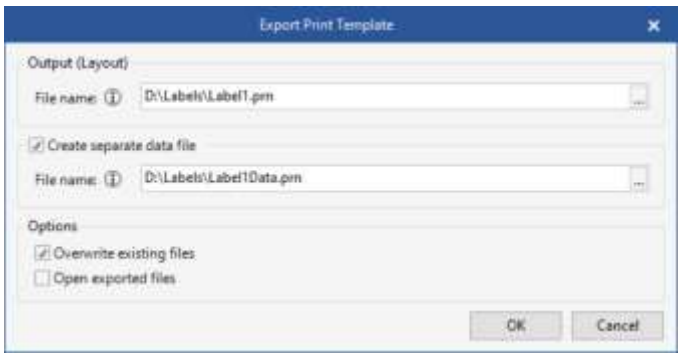

The option **Create separate data file** must be selected, otherwise the line (SOH)**FBC---r--------**(ETB) is included in the print file, which would immediately release a print procedure.

By starting a print procedure, this print file (layout definition / mask definition) is transferred from the controller/computer system to the printer first.

Save the layout on the memory card of the printer

As an alternative to 'Export to a print file' the label layout is saved on the memory card of the printer. For this, the memory card tool from Labelstar Office can be used.

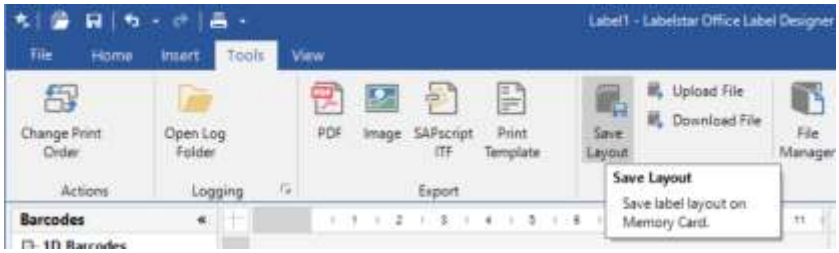

The layout must be called by the controller/computer system **before** filling the variable fields.

The following parameter set is used:

(SOH)**FMA---r*filename***(ETB)

The path name is determined when saving and possibly contains a path.
Example: "A:\Standard\eti1".

Filling the variable fields by the controller/computer system

The higher-level control can select the variable fields by the field names and set the contents. Subsequently, the print job is restarted.

Example

(SOH)**FMB---r*filename***(ETB)	Loading the layout from mc
(SOH)**BV[*ArtBez*]screws**(ETB)	Filling the field "ArtBez" with "screws"
(SOH)**BV[*ArtNr*]123456789**(ETB)	Filling the field "ArtNr" with "132456789"
(SOH)**FBC---r--------**(ETB)	Start printing

4.4 Field Selection by Free Definable Field Number

With the following described attribute it is possible to assign a free definable field number to a field. This field number does not have to be clear, i.e. several fields can have the same field number. In this way the same field contents can be assigned to different fields.

The following attribute identification is defined:

Attribute: **FN**
Description: free definable field number

After the field number was assigned with AC mask statement,

(SOH)AC[n]FN=nr(ETB)

n = field index
nr = free definable field number

it is possible to access to the field and/or the fields with the new BF text statement:

(SOH)BF[nr]text(ETB)

nr = field number
text = field contents

Example

```
// Assignment of field number field 1 and field 2
(SOH)AM[1]1000;2500;0;4;2;7;400;400;0(ETB)
(SOH)AC[1]FN=100(ETB)
(SOH)AM[2]2000;2500;0;30;2;4000;9;3;0;1(ETB)
(SOH)AC[2]FN=100(ETB)

// Access to field 1 and field 2 by field number
(SOH)BF[100]1234567890(ETB)
```

5 Mask Set

5.1 Text

AM[n]y;x;p;a;d;z;dy;dx;lp;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y coordinate in 1/100 mm
x	X coordinate in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 1 = bitmap font 2 = bitmap font inverse 4 = vector font 5 = vector font autoscale 6 = vector font inverse 7 = vector font autoscale inverse
d	rotation 0 = 0° 2 = 180° 1 = 90° 3 = 270°
z	**character set not proportional bitmap fonts (1+2)** 01 = FONT 01 0,8 x 1,1 mm 127 characters 02 = FONT 02 1,2 x 1,7 mm 255 characters 03 = FONT 03 1,8 x 2,6 mm 255 characters 04 = FONT 04 4,0 x 5,6 mm 127 characters 05 = FONT 05 1,8 x 3,2 mm - descender 255 characters 07 = FONT 07 1,2 x 2,2 mm - descender 255 characters **character set proportional bitmap fonts (1+2)** 21 = FONT 21 (1,0; 13) 255 characters 22 = FONT 22 (1,8; 21) 255 characters 23 = FONT 23 (2,6; 31) 255 characters 24 = FONT 24 (5,6; 67) 255 characters 28 = FONT 28 (4,0; 48) 255 characters 29 = FONT 29 (0,8; 9) 255 characters **character set vector fonts (4-7)** 01 = Helvetica Bold 02 = Helvetica Bold italics 03 = Helvetica Roman 04 = Helvetica Roman italics 05 = Swiss Light 06 = Swiss Light italics 07 = Baskerville 08 = Baskerville italics 09 = Brush Script 10 = Brush Script italics 11 = Monospace 12 = Monospace italics 17 = OCR-A 18 = OCR-A italics 19 = OCR-B 20 = OCR-B italics

dy	extension in direction Y bitmap fonts — factor 0..9 vector fonts — character size in 1/100 mm vector fonts autoscale — field height
dx	extension in direction X bitmap fonts — factor 0-9 vector fonts — character size in 1/100 mm vector fonts autoscale — field width
lp	distance between single characters in 1/100 mm
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

5.2 One-Dimensional Bar Code

AM[n]y;x;p;a;d;h;v1;v2;pz;z;dp	
A	identification for mask set
M	identification for protocol version
n	Field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	Identification for field type 30 = Code 39 31 = Code 2/5 interleaved 32 = EAN 8 33 = EAN 13 34 = UPC A 35 = UPC E 36 = CODABAR 37 = Code 128 38 = EAN ADD ON 39 = GS1-128 40 = Code 93 41 = PZN 7 42 = 2/5 Industrie 43 = Leitcode 44 = Identcode 46 = Code 39 extended 47 = Code 128 A 48 = Code 128 B 49 = Pharmacode 60 = PZN 8 62 = USPS Intelligent Mail 63 = POSTNET
d	Rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
h	symbol height in 1/100 mm
v1	relation 1; module width 'THICK'
v2	relation 2; module width 'THIN' and/or SC factor
pz	check digit calculation 0 = no check digit calculation 1 = check digit calculation 4 = inverse - no check digit calculation 5 = inverse - check digit calculation
z	human readable line 0 = no human readable line 1 = with human readable line
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right centre

5.3 ITF Bar Code

AM[n]y;x;p;a;d;h;v1;v2;pz;z;dp	
A	identification for mask set
M	identification for protocol version
n	Field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 56 = ITF 14
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
h	symbol height in 1/100 mm
v1	relation 1; module width 'THICK'
v2	relation 2; module width 'THIN' and/or SC factor
pz	check digit calculation 0 = no check digit calculation 1 = check digit calculation 4 = inverse - no check digit calculation 5 = inverse - check digit calculation
z	human readable line 0 = no human readable line 1 = with human readable line
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right centre

In order to print the bearer bars of an ITF 14 barcode, the following additional properties for Code 2/5 interleaved must be set:

For this the following field properties are determined:

Property identifier	Description
BT	bearer bar type 0 = no bars 1 = above/below 2 = rectangle
BW	bearer bar width in 1/100 mm
QZ	quiet zone in 1/100 mm

Example

```
// BARCODE (1/100 mm)
(SOH)AM[1]4498;7076;0;31;2;3000;12;4;0;1;3(ETB)
(SOH)AC[1]BT=2;BW=150;QZ=600(ETB)
(SOH)BM[1]1234567890123(ETB)
```

5.4 PDF417

AM[n]y;x;p:a;d;s;rw;rh;ec;z;dp;c;r	
A	identification for mask set
M	identification for protocol version
n	Field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 50 = PDF417
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
s	symbol size
rw	relation width
rh	relation height
ec	error correction level 0 - ECC Level = 0 1 - ECC Level = 2 2 - ECC Level = 6 3 - ECC Level = 14 4 - ECC Level = 30 5 - ECC Level = 62 6 - ECC Level = 126 7 - ECC Level = 254 8 - ECC Level = 510
z	style 0 = standard 1 = truncated 2 = naked 3 = bare
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom
c	number of columns 0 = automatic, 1-30
r	number of rows 0 = automatic, 3-90

5.5 MAXICODE

AM[n]y;x;p;a;d;0;sn;ns;m;0;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 51 = MAXICODE
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
0	dummy
sn	symbol number
ns	quantity of symbols
m	mode 2 = Structured Message (US Carrier) 3 = Structured Message (International Carrier) 4 = Default message
0	dummy
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

5.6 DataMatrix

AM[n]y;x;p;a;d;s;aw;ah;ec;f;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 52 = DataMatrix
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
s	symbol size in 1/100 mm
aw	relation width
ah	relation height
ec	Error Correction 0 - ECC Type = 0 ECC Level = 0 Overhead = 0 % 1 - ECC Type = 2* ECC Level = 40 Overhead = 33 % 2 - ECC Type = 3 ECC Level = 50 Overhead = 25 % 3 - ECC Type = 6 ECC Level = 80 Overhead = 33 % 4 - ECC Type = 8 ECC Level = 100 Overhead = 50 % 5 - ECC Type = 9* ECC Level = 110 Overhead = 75 % 6 - ECC Type = 10* ECC Level = 120 Overhead = 50 % 7 - ECC Type = 11* ECC Level = 130 Overhead = 67 % 8 - ECC Type = 12 ECC Level = 140 Overhead = 75 % 9 - ECC Type = 26 ECC Level = 200 Overhead = 0 %
f	format ID of data 0 - Format ID = 11 (numeric, 2000 characters)* 1 - Format ID = 1 (numeric, 500 characters) 2 - Format ID = 2 (alphabetical, 500 characters) 3 - Format ID = 3 (alphabetical + pointers, 500 characters) 4 - Format ID = 4 (alphanumeric, 500 characters) 5 - Format ID = 5 (7 Bit, 500 characters) 6 - Format ID = 6 (8 Bit, 500 characters) 7 - Format ID = 7 (pre-programmed, 500 characters)* 8 - Format ID = 12 (alphabetical, 2000 characters) 9 - Format ID = 14 (alphanumeric, 2000 characters)
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

* not supported from printer

5.7 GS1 DataMatrix

AM[n]y;x;p;a;d;s;aw;ah;ec;f;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 59 = GS1 DataMatrix
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
s	symbol size in 1/100 mm
aw	relation width
ah	relation height
ec	Error Correction 0 - ECC Type = 0 ECC Level = 0 Overhead = 0 % 1 - ECC Type = 2* ECC Level = 40 Overhead = 33 % 2 - ECC Type = 3 ECC Level = 50 Overhead = 25 % 3 - ECC Type = 6 ECC Level = 80 Overhead = 33 % 4 - ECC Type = 8 ECC Level = 100 Overhead = 50 % 5 - ECC Type = 9* ECC Level = 110 Overhead = 75 % 6 - ECC Type = 10* ECC Level = 120 Overhead = 50 % 7 - ECC Type = 11* ECC Level = 130 Overhead = 67 % 8 - ECC Type = 12 ECC Level = 140 Overhead = 75 % 9 - ECC Type = 26 ECC Level = 200 Overhead = 0 %
f	format ID of data 0 - Format ID = 11 (numeric, 2000 characters)* 1 - Format ID = 1 (numeric, 500 characters) 2 - Format ID = 2 (alphabetical, 500 characters) 3 - Format ID = 3 (alphabetical + pointers, 500 characters) 4 - Format ID = 4 (alphanumeric, 500 characters) 5 - Format ID = 5 (7 Bit, 500 characters) 6 - Format ID = 6 (8 Bit, 500 characters) 7 - Format ID = 7 (pre-programmed, 500 characters)* 8 - Format ID = 12 (alphabetical, 2000 characters) 9 - Format ID = 14 (alphanumeric, 2000 characters)
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

* not supported from printer

5.8 CODABLOCK F

AM[n]y;x;p;a;d;h;nc;nl;m;s;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = printout 1 = np printout
a	identification for field type 53 = CODABLOCK F
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
h	line height in symbol
nc	quantity of characters/line
nl	quantity of lines
m	mode
s	module size
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

5.9 GS1 DataBar (RSS Code)

AM[n]y;x;p;a;d;s;m;k;t;0;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 54 = GS1 DataBar (RSS)
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
s	number of segments per line [2..22]
m	module width [1 …12]
k	separator height [1,2]
t	symbol type 1 = GS1 DataBar Omnidirectional (RSS-14) 2 = GS1 DataBar Truncated (RSS-14 Truncated) 3 = GS1 DataBar Stacked (RSS-14 Stacked) 4 = GS1 DataBar Stacked Omnidirectional (RSS-14 Stacked Omnidirectional) 5 = GS1 DataBar Limited (RSS Limited) 6 = GS1 DataBar Expanded (RSS Expanded)
0	not used
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

5.10 QR Code

AM[n]y;x;p;a;d;mo;cs;ms;cw;ec;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 57 = QR Code
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
mo	code model 1 = Code Model 1 2 = Code Model 2
cs	character set N = numeric A = alphanumeric B = 8-bit byte K = kanji
ms	masking -1 = auto 0-7 = mask x 8 = no masking
cw	line width in 1/100 mm per module possible values: 0-800
ec	error correction (restoring capacity) L = 7 % M = 15 % Q = 25 % H = 30 %
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

5.11 Aztec Code

AM[n]y;x;p;a;d;h;f;ec;m;0;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 61 = Aztec Code
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
h	symbol size in 1/100 mm (max 1 cm)
f	format 0 = Auto 1 = C15xC15 Compact 2 = C19xC19 Compact 3 = C23xC23 Compact 4 = C27xC27 Compact 5 = C19xC19 6 = C23xC23 7 = C27xC27 8 = C31xC31 9 = C37xC37 10 = C41xC41 11 = C45xC45 12 = C49xC49 13 = C53xC53 14 = C57xC57 15 = C61xC61 16 = C67xC67 17 = C71xC71 18 = C75xC75 19 = C79xC79 20 = C83xC83 21 = C87xC87 22 = C91xC91 23 = C95xC95 24 = C101xC101 25 = C105xC105 26 = C109xC109 27 = C113xC113 28 = C117xC117 29 = C121xC121 30 = C125xC125 31 = C131xC131 32 = C135xC135 33 = C139xC139 34 = C143xC143 35 = C147xC147 36 = C151xC151
ec	error correction (only if format = 0) 1 = 10 % 2 = 23 % 3 = 36 % 4 = 50 %
m	mode 0 = data 1 = runes (figures 0-255) 2 = Unicode (8 Bit ASCII) 3 = GS1 (not yet available)
0	dummy
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

5.12 Rectangle

AM[n]y;x;p;a;h;b;s;m;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 10 = rectangle
h	rectangle height in 1/100 mm
b	rectangle height in 1/100 mm
s	line width in 1/100 mm
m	line type; 1 digit
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

5.13 Line

AM[n]y;x;p;a;d;l;s;m;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = printout 1 = no printout
a	identification for field type 11 = line
d	rotation 0 = horizontal 1 = vertical
l	length in 1/100 mm
s	line width in 1/100 mm
m	line type; 1 digit
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

5.14 Internal Graphic

AM[n]y;x;p;a;d;dy;dx;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 3 = internal graphic
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
dy	rotation in direction Y
dx	rotation in direction X
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

6 Text Set

BM[n]text	
B	identification for text set
M	identification for extended protocol
n	field number
text	data contents, text

BV[n]text	
B	identification for text set
V	identification for selection by field name
n	field name
text	data contents, text

BF[n]text	
B	identification for text set
F	identification for selection by free definable field number
n	field number
text	data contents, text

6.1 Examples

Mask set

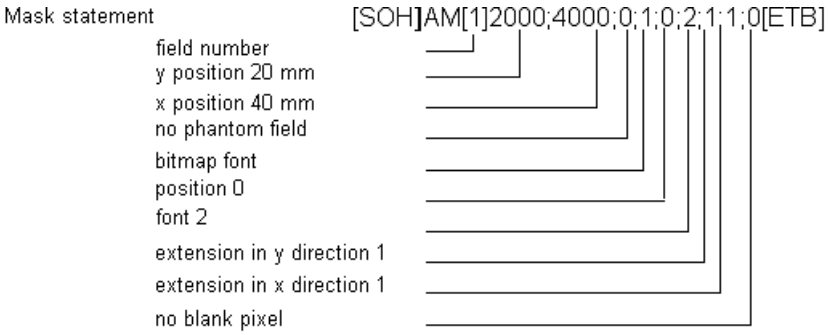

Texts set



Text set with variable definition:

[SOH]BM[125]=CN(0,0,3,1,1)000[ETB]

Example label

ASCII data	Identification
⊗AM[1]3600;4600;0;33;0;1500;0;4;1;1⊕ $^{C}_{R}$ $^{L}_{F}$	mask set for bar code
⊗BM[1]444444444444⊕ $^{C}_{R}$ $^{L}_{F}$	appropriate text set
⊗AM[2]600;4700;0;4;0;1;300;200;24⊕ $^{C}_{R}$ $^{L}_{F}$	five mask sets vector font / proportional font
⊗AM[3]600;3100;0;4;0;1;400;300;24⊕ $^{C}_{R}$ $^{L}_{F}$	
⊗AM[4]1100;4700;0;4;0;1;400;300;24⊕ $^{C}_{R}$ $^{L}_{F}$	
⊗AM[5]1800;4700;0;4;0;1;300;200;24⊕ $^{C}_{R}$ $^{L}_{F}$	
⊗AM[6]1900;3700;0;4;0;1;600;400;24⊕ $^{C}_{R}$ $^{L}_{F}$	
⊗BM[2]Art.Nr. ⊕ $^{C}_{R}$ $^{L}_{F}$	five appropriate text sets
⊗BM[3]44444⊕ $^{C}_{R}$ $^{L}_{F}$	
⊗BM[4]Artikelbezeichnung⊕ $^{C}_{R}$ $^{L}_{F}$	
⊗BM[5]DM⊕ $^{C}_{R}$ $^{L}_{F}$	
⊗BM[6]99,-- ⊕ $^{C}_{R}$ $^{L}_{F}$	
⊗FBA000r06000000⊕ ⊗FBBA00r00001000⊕ ⊗FBC000r00000000⊕	number of lines number of items start

: graphic data in PCX format
⊗: SOH (1_{hex} bzw $5E_{hex}$)
⊕: ETB (17_{hex} bzw. $5F_{hex}$)
$^{C}_{R:}$ CarrigeReturn ($0D_{hex}$)
$^{L}_{F}$: LineFeed ($0A_{hex}$)

7 Graphic Set

7.1 General Graphic Format

This format is supported by all our printers but note that a 8 bit transmission is absolute necessary.

SOH	D	p	p	p	p	lb	lb	lb	b	b	b	gb.....	ETB

			min.	max.
D	=	identification for graphic set		
p	=	pixel line from above	'0000'	'1900'
lb	=	1. byte from left	'000'	'100'
b	=	quantity of bytes	'1'	'100'
gb	=	graphic bytes		

Graphic byte



1 graphic bit = 0,083 x 0,083 mm

7.2 Graphic in PCX Format

It is possible to transfer graphic data as a PCX-file (e.g. PaintBrush) to the printer. With this type of data transfer the PCX-file is transferred in a compressed form. Hereby the RLE-procedure is used and therefore the graphic data were reduced by approx. 30 %. This means that the effective transferring time for 300 dpi printers is cut in halves.

To set the printer ready for receiving PCX-data the protocol has to be switched over and hereby the following command set will be defined:

SOH	A	X	n	n	n	y	y	y	y	y	y	x	x	x	x	x	x	m	dp	ETB

n	Index of transferred graphic to printer internal maintenance at present not processed (000)		
y	Y coordinate of graphic in 1/100 mm		
x	X coordinate of graphic in 1/100 mm		
m	Mode 0 = standard (background is overwritten) Mode 1 = transparency (background is maintained) Mode 2 = inverse (background is overwritten) Mode 3 = inverse transparency (background is maintained)		
dp	datum point 1 = left top 4 = left centre 7 = lleft bottom (default)	2 = centre top 5 = centre centre 8 = centre bottom	3 = right top 6 = right centre 9 = right bottom

- It is recommended to observe that directly after the final sign (ETB) no separator res. fill character such as $^{C}_{R}$ $^{L}_{F}$ is indicated.
- The printer supports the following PCX versions: 5, 3, 2 and 0.
- It is necessary that the corresponding PCX-file is available as monochrome (black/white).
- The graphic has to be available in the original size as the printer is not able to change the size by itself.

NOTICE!

Before print start, indicated by parameter set 'FBC', the definition of field number, lines and pieces has to be effected via the parameter sets (FBA res. FBB).

7.3 Example PCX File

-*** PCX_GRAPHIC-INFO ***-

⊗AX0010015300100941⊕##

⊗AM[1]3600;4600;0;33;0;1500;0;4;1;1⊕ $^{C}_{R}$ $^{L}_{F}$	mask set for bar code
⊗BM[1]444444444444⊕ $^{C}_{R}$ $^{L}_{F}$	appropriate text set
⊗AM[2]600;4700;0;4;0;1;300;200;24⊕ $^{C}_{R}$ $^{L}_{F}$ ⊗AM[3]600;3100;0;4;0;1;400;300;24⊕ $^{C}_{R}$ $^{L}_{F}$ ⊗AM[4]1100;4700;0;4;0;1;400;300;24⊕ $^{C}_{R}$ $^{L}_{F}$ ⊗AM[5]1800;4700;0;4;0;1;300;200;24⊕ $^{C}_{R}$ $^{L}_{F}$ ⊗AM[6]1900;3700;0;4;0;1;600;400;24⊕ $^{C}_{R}$ $^{L}_{F}$	five mask set vector font / proportional font
⊗BM[2]Art.Nr. ⊕ $^{C}_{R}$ $^{L}_{F}$ ⊗BM[3]44444⊕ $^{C}_{R}$ $^{L}_{F}$ ⊗BM[4]Artikelbezeichnung⊕ $^{C}_{R}$ $^{L}_{F}$ ⊗BM[5]DM⊕ $^{C}_{R}$ $^{L}_{F}$ ⊗BM[6]99,-- ⊕ $^{C}_{R}$ $^{L}_{F}$	five appropriate text sets
⊗FBA00r06000000⊕ ⊗FBBA00r00001000⊕ ⊗FBC000r00000000⊕	set number of lines (FBA…) set quantity (FBBA..) start print order (FBC…)

: Grafikdaten im PCX Format
⊗: SOH (1_{hex} bzw $5E_{hex}$)
⊕: ETB (17_{hex} bzw. $5F_{hex}$)
$^{C}_{R:}$ CarrigeReturn ($0D_{hex}$)
$^{L}_{F:}$ LineFeed ($0A_{hex}$)

8 Variables

8.1 Set Structure

SOH	BM	[n]	=	v	v	(	p1	p2	p..	pn	)	t1	t2	t..	t70	ETB

=	start of function
vv	variable type
	SC link field
	CN counter
	CC extended counter
	CL date/time
	CU currency variable
	SH shift variable
	MD memory card data
(	start of variable parameter block
p1…pn	variable parameter
)	end of variable parameter block

NOTICE!

In case you want to print a text which corresponds exactly to the variable definition then you have to place '!' before.

SOH	BM	[n]	!	=	v	v	(	p1	p2	p..	pn	)	t1	t2	t..	t70	ETB

8.2 Link Field

SOH	BM	[n]	=	S	C	(	p1	;	p2	;	p..	;	pn	)	t1	t2	t..	t70	ETB

= SC	identification of link field
p1…pn	identification of link elements (field number or constant text) field number is entered without leading '0' constant text is included in " but these marks are not printed

NOTICE!

Reference fields can be constant text or variables but no link fields.

Example

=SC(1;2;3) --> Printout: Field1Field2Field3

=SC(1;“constant“;2) --> Printout: Field1constantField2

8.3 Counter

SOH	BM	[n]	=	C	N	(	t	;	m	;	c	;	+/-	s	;	i	;	h	;	r	)	t1	t2	t..	t70	ETB

= CN identification counter

t type of counter
- 0 numerical
- 1 letters only
- 2…36 radix, base of the counter

m function mode
- 0 standard
- 1 return to start value
- 2 enter the start value at the beginning of printing (default = existing start value)
- 3 enter the start value at the beginning of printing (default = last final number)
- 4 reset start value at cycle end (only for DPM IIIi)
- 5 reset start value by I/O signal
- 6 time-controlled resetting
- 7 time-controlled resetting with input of initial value (default = last final value)

c digit where the numbering starts counting

+/− direction
- \+ adding
- − subtracting

s step width

i update interval
(number of labels with identical number)

h time by which the counter is reset (function mode 6 and 7)
in format 'HH:MM'
e.g. 00:00 = reset counter at 0:00
(optional, only for function mode 6 and 7)

r reset value
(optional, only for function mode 6 and 7; default = text and/or initial value)
Limitation:
The time-controlled resetting of counter variable is only effected in case of an active print order. If a print order is cancelled before the specified time and afterwards again restarted then no resetting of counter value is effected.

t1, t2, … text res. start value of counter

Example:

Input: =CN(10;7;4;+1;1;06:00;0001)1234

The enquiry for the initial value is effected at print start and at 6:00 the counter variable is reset to value 0001.

8.4 Extended Counter

SOH	BM	[n]	=	C	C	(	+/-	s	;	i	;	m	;	z	;	n	;	x	)	t	ETB

= CC identification of numeric counter

+/− direction
+ counter adding
− counter subtracting

s step width

i update interval
(number of labels with identical number)

m function mode
0 standard
1 return to start value
2 enter the start value at the beginning of printing
(default = existing start value)
3 enter the start value at the beginning of printing
(default = last final number)
4 reset start value at cycle end
(only for DPM IIIi)
5 set min. / max. value
6 set start value
7 print end

z leading zeros
0 no leading zeros
1 printout with leading zeros

n minimum value (max. -999999999)

x maximum value (max. 999999999)

t start value
(the number of digits determines the format for the printout with leading zeros
(max. 999999999)

Example:

Input: =CC(+1;2;5;0;1,999)0050

Printout: 50, 51,…999, 1, 2, …

8.5 Date and Time

SOH BM [n] = CL (m;d;i;n;c;mo;pd;pm;md;mm;rw;ws) t1 t.. t70 ETB

= CL identification date/time

m month offset to the actual date
(negative value/entry possible)

d day offset to the actual date

i update interval
(0 = at the beginning of a print order, 1 = each label)

Optional parameters

n minute offset to the actual time
(negative entry/value possible)

c correction month overflow
(0 = change to the next month, 1 = remain in current month)

Optional parameters for BBE date

mo input mode
0: standard; display current date of real time clock
1: display calculated date, modification possible
2: display calculated date, no modification possible

pd max. positive correction days

pm max. positive correction months

md max. negative correction days

mm max. negative correction months

Optional parameters for rounded date

rw rounded weekday: 1 = Sunday … 7 = Saturday; 0 = no rounding

ws start of week, format: "D-HH:MM",
e.g. 1-00:00 = Sunday, 0:00 Uhr

Example

Actual date as per Real Time Clock: 08.12.

Input: =CL(0;0;0)<DD.MO.> Printout: 08.12.
Input: =CL(2;1;0)<DD.MO.> Printout: 09.02.

Example for BBE date

Input: =CL(0;0;0;0;0;1;3;2;3;2)<DD.MO.>

At print start the calculated date is displayed at the printer and can be modified (+/− 3 days and +/− 2 months):

Display:

```
ID_1    DD:MO:YY
        08.12.11
```

Example for rounded date

The beginning of the week is on Sunday (08.12.) at 00:00. The date of Monday should be printed the whole week.

Input: =CL(0;0;0;0;0;0;0;0;0;0;2;1-00:00)<DD.MO.>

Current date	Rounded date
07.12. 23:59:59	02.12.
08.12. 00:00:00	09.12.
09.12.	09.12.
14.12. 23:59:59	09.12.
15.12. 00:00:00	16.12.

8.6 Format Identifier (Date & Time)

Standard format	
HH	Hours 2-digit (24 hours)
HE	**Hours 2-digit (12 hours)**
MI	Minutes 2-digit
SS	Seconds 2-digit
AM	**AM/PM output**
DD	Day 2-digit
MO	Month 2-digit
YYYY	Year 4-digit
YY	Year 2-digit
Y	Year 1-digit
WW	Calendar week
DW	Day of week (Sunday = 0)
DW1	Day of week (Sunday = 1)
DwX	Day of week An arbitrary ASCII character can be used for x, from which it is counted consecutively
DOWxxxxxxx	Day of week - variable For x, any ASCII character can be used The first ‚x' denominates Sunday, the next denominates Monday and so on until Saturday For each weekday a character must be created
DOY	Day of year 3-digit (First January = 1)
DY	Day of year 3-digit (First January = 0)
Examples	
DD.MO.YY	22.01.10
MO/DD/YYYY	01/22/2010
YY-MO-DD	10-01-22
YYMODD	100122

The format identifier 'HE' and 'AM'/'am'/'Am' are supplemented. Therefore the output of hours in 12-hours mode is possible. By the additional output of format identifier 'AM' the output of time in american/english format is possible.

Example

```
=CL(0;0;0;0)<HH:MI:SS>          -->   15:30:00
=CL(0;0;0;0)<HE:MI:SS>          -->   03:30:00
=CL(0;0;0;0)<HE:MI:SS AM>       -->   03:30:00 PM
=CL(0;0;0;0)<HE:MI:SS am>       -->   03:30:00 pm
=CL(0;0;0;0)<HE:MI:SS Am>       -->   03:30:00 p.m.
```

By separating the output of time and AM/PM output in 2 text fields, also the following output format is possible:
--> 03:30:00 pm

Extended format	
XMO	Name of month short
XSO	Name of month long
XSD	Weekday short
XLD	Weekday long
For X you can enter the country identification of desired language	
C = Canadian D = Danish E = English F = French G = German I = Italian N = Dutch O = Norwegian S = Spanish U = Finnish W = Swedish	
Examples:	
DD.EMO.YY	22.JAN.10
DD.ESO YYYY	22. January 2010
ELD,DD.GMO.YY	Friday, 22. JAN.10
ESD,DD.MO.YY	FR, 22.01.10

Extended format - XMO

C	JA	FE	MR	AL	MA	JN	JL	AU	SE	OC	NO	DE
D	JAN	FEB	MAR	APR	MAJ	JUN	JUL	AUG	SEP	OKT	NOV	DEC
E	JAN	FEB	MAR	APR	MAY	JUN	JUL	AUG	SEP	OCT	NOV	DEC
F	JAN	FEV	MAR	AVR	MAI	JUIN	JUIL	AOU	SEP	OCT	NOV	DEC
G	JAN	FEB	MRZ	APR	MAI	JUN	JUL	AUG	SEP	OKT	NOV	DEZ
I	GEN	FEB	MAR	APR	MAG	GIU	LUG	AGO	SET	OTT	NOV	DIC
N	JAN	FEB	MRT	APR	MEI	JUN	JUL	AUG	SEP	OKT	NOV	DEC
O	JAN	FEB	MAR	APR	MAI	JUN	JUL	AUG	SEP	OKT	NOV	DES
S	ENE	FEB	MAR	ABR	MAY	JUN	JUL	AGO	SEP	OCT	NOV	DIC
U	TAM	HEL	MAA	HUH	TOU	KES	HEI	ELO	SYY	LOK	MAR	JOU
W	JAN	FEB	MAR	APR	MAJ	JUN	JUL	AUG	SEP	OKT	NOV	DEC

Extended format - XSO

C	January	February	March	April	May	June
D	Januar	Februar	Marts	April	Maj	Juni
E	January	February	March	April	May	June
F	Janvier	Février	Mars	Avril	Mai	Juin
G	Januar	Februar	Maerz	April	Mai	Juni
I	Gennaio	Febbraio	Marzo	Aprile	Maggio	Giugno
N	Januari	Februari	Maart	April	Mei	Juni
O	Januar	Februar	Mars	April	Mai	Juni
S	Enero	Febrero	Marzo	Abril	Mayo	Junio
U	Tammikuu	Helmikuu	Maaliskuu	Huhtikuu	Toukokuu	Kesaekuu
W	Januari	Februari	Mars	April	Maj	Juni

C	July	August	September	October	November	December
D	Juli	August	September	Oktober	November	December
E	July	August	September	October	November	December
F	Juillet	Août	Septembre	Octobre	Novembre	Décembre
G	Juli	August	September	Oktober	November	Dezember
I	Luglio	Agosto	Settembre	Ottobre	Novembre	Dicembre
N	Juli	Augustus	September	Oktober	November	December
O	Juli	August	September	Oktober	November	Desember
S	Julio	Agosto	Septiembre	Octubre	Noviembre	Diciembre
U	Heinaekuu	Elokuu	Syyskuu	Lokakuu	Marraksuu	Joulukuu
W	Juli	Augusti	September	Oktober	November	December

Extended format - XSD

C	SUN	MON	TUE	WED	THU	FRI	SAT
D	SO	MA	TI	ON	TO	FR	LO
E	SUN	MON	TUE	WED	THU	FRI	SAT
F	DIM	LUN	MAR	MER	JEU	VEN	SAM
G	SO	MO	DI	MI	DO	FR	SA
I	DOM	LUN	MAR	MER	GIO	VEN	SAB
N	ZO	MA	DI	WO	DO	VR	ZA
O	SO	MA	TI	ON	TO	FR	LO
S	DOM	LUN	MAR	MIE	JUE	VIE	SAB
U	SU	MA	TI	KE	TO	PE	LA
W	SO	LA	TI	ON	TO	FR	LO

Extended format - XLD

C	Sunday	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday
D	Søndag	Mandag	Tirsdag	Onsdag	Torsdag	Fredag	Lørdag
E	Sunday	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday
F	Dimanche	Lundi	Mardi	Mercredi	Jeudi	Vendredi	Samedi
G	Sonntag	Montag	Dienstag	Mittwoch	Donnerstag	Freitag	Samstag
I	Domenica	Lunedi	Martedi	Mercoledi	Giovedi	Venerdi	Sabato
N	Zondag	Maandag	Dinsdag	Woensdag	Donderdag	Vrijdag	Zaterdag
O	Søndag	Mandag	Tirsdag	Onsdag	Torsdag	Fredag	Lørdag
S	Domingo	Lunes	Martes	Miércoles	Jueves	Viernes	Sábado
U	Sunnuntai	Maanantai	Tiistai	Keski-viikko	Torstai	Perjantai	Lauantai
W	Söndag	Måndag	Tisdag	Onsdag	Torsdag	Fredag	Lördag

8.7 Currency Variable

SOH	BM	[n]	=	C	U	(	a	;	b	;	c	;	d	;	e	;	f	;	g	)	t1	t2	t..	t70	ETB

= CU	Signification of variable Euro	
a	ANSI-Code of thousand separator as decimal figure	
b	ANSI-Code of comma separator as decimal figure	
c	Quantity of numbers after the comma as decimal figure	
d	Operand A	Before the processing the variable Euro calculates the term
e	Operand B	
f	Operand C	$\frac{A \times B}{C}$
g	Rounding format	
t1, t2, …	Format string, is indicated by "< >"	

Example:

In case the contents of field 20 has to be converted from USD into EUR the definition of variable for the user defined format is as follows:

B01 '=CU(46;44;2;20;"1,0";"0,68861";"0,01")Result: <>Euro'
B20 1.250,44 USD

Printout: 1.250,44 USD
Result: 1.815,89 Euro*

* 1 USD = 0,68861 Euro (11.01.2010)

8.8 Shift Variable

SOH	BM	[n]	=	S	H	(	)	t1	t2	t..	t70	ETB

= SH identification of shift variable

NOTICE!

The shift variable did not need any parameters. The settings for the output are defined with the corresponding parameter sets. (see above)

Beispiel

The shift times are defined: 00:00 - 11:59 "Shift1"
12:00 - 23:59 "Shift2"

=SH() Printout at 10:00 Uhr: "Shift1"
=SH() Printout at 13:00 Uhr: "Shift2"

Set shift times

SOH	F	C	I	D	-	-	r	N	N	H	H	M	M	h	h	m	m	ETB

NN = ID [01 … 24]
HH = start hour
MM = start minute
hh = end hour
mm = end minute

Enquire shift variable

SOH	F	C	I	D	-	-	w	N	N	p	p	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	H	H	M	M	h	h	m	m	p	p	p	p	p	p	p	p	ETB

Set shift text

SOH	F	C	I	E	-	-	r	N	N	T	T	T	T	T	T	T	T	T	T	ETB

NN = ID [01 … 24]
T = max. 10 characters

Enquire shift variable

SOH	F	C	I	E	-	-	w	N	N	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	;	T	T	T	T	T	T	T	T	T	T	;	p	p	p	p	p	p	p	p	ETB

8.9 User Guiding

SOH	BM	[n]	=	U	G	(	c	;	t	;	m	;	ap	;	ae	;	sp	)	t1	t2	t..	t70	ETB

= UG identification user guiding

c start position for the entry

t type of entry
0 numerical
1 alphanumerical

m mode of entry
0 do not jump over special characters
1 jump over special characters

ap alignment at printing
0 aligned to the right side

ae alignment at entry
0 aligned to the right side

sp prompt text for the variable, max. 24 characters
The entry has to be included in ".

Example

Entry: =UG(1;0;0;0;0;“Enter article no.“)<123456>
Display:
```
Enter article no.
123456
```

8.10 User Guiding with Mask

SOH	BM	[n]	=	U	M	(	c	;	t	;	m	;	ap	;	ae	;	sp	;	d	;	ma	)	t1	t2	t..	t70	ETB

= UM identification user guiding with mask

c start position for the entry

t type of entry (is ignored with existing mask definition)
- 0 numerical
- 1 alphanumerical

m mode of entry (is ignored with existing mask definition)
- 0 do not jump over special characters
- 1 jump over special characters

ap alignment at printing
- 0 aligned to the right side

ae alignment at entry
(always left aligned with existing mask definition)
- 0 right aligned
- 1 left aligned, cursor at the beginning of the text
- 2 left aligned, cursor at the start position
- 3 right aligned, remove fill characters
- 4 left aligned, cursor at the beginning of the text, remove fill characters
- 5 left aligned, cursor at the start position, remove fill characters

sp prompt text for the variable, max. 24 characters
The entry has to be included in ".

d deleting setpoint value
- 0 setpoint value remains at key entry (inserting mode)
- 1 with first key press the setpoint value disappears
- 2 setpoint value is retained (overwrite mode)

ma definition of mask
possible mask characters are
- 9 numbers only
- # only numbers and leading signs
- ? letters only
- a alphanumeric characters (letters and numbers)
- C any characters

Example

Entry: =UM (1;0;0;0;0;“Enter article no.“;0;“999-aa“)<123-xx>
Display:
```
Enter article no.
123-xx
```

8.11 Memory Card Data

SOH	BM	[n]	=	M	D	(	FN="filename";	SE='x';	CH=x;	SC="x";	SF="x";	RC="x")	ETB

= MD	identification of memory card data
FN	file name of table onto memory card with CSV data
SE	Separator sign (default = ';')
CH	column name in the first line (0 = no, 1 = yes)
SC	name and/or number of column that should be referenced
SF	field name and/or field index of field onto the label, which contains the searched data
RC	name and/or number of column, which contains the data to be printed

NOTICE!

If in parameter SF a field name is indicated, this must have beed defined for the appropriate field by an AC attribute statement!

Example

AC[1]NAME="FCODE"
BM[2]=MD(FN="a:\daten.csv";SE=';';CH=1;SC="Farbcode";SF="FCODE";
RC="IC-Nummer")

Field 1	Output Field 2
00001	121478242
23252	784587448

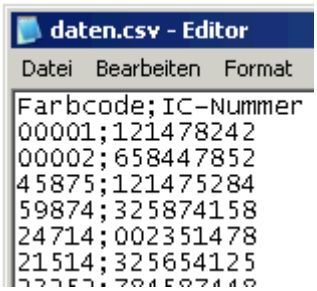

8.12 GS1-128 Parser

NOTICE!

By means of this variable type, the content of an application identifier in a GS1-128 bar code can be determined.

SOH	BM	[n]	=	A	I	(	p	;	Ai	)	ETB

= AI	identification of GS1-128 parser
p	identification of the link element (field number)
Ai	application identifier

Example

Field 1 ="00123456789012345675"	GS1-128 with AI00
=AI(1;"00")	Printout: 123456789012345675

8.13 EPC Calculation (Electronic Product Code)*

SOH	BM	[n]	=	E	P	C	(	M	;	L	;	F	;	P	;	N1	;	{N2}	)	ETB

= EPC	identification of EPC calculation
M	coding method
L	length of manufacturer number (company prefix)
F	filter value
P	verification of check digit
N1	identification of link element (field number)
N2	identification of link element (field number) - optional

For more information, visit the following web sites:
www.epcglobalinc.org or www.gs1.org

Param.	**Value range**		
M	0 = coding method SSCC96	3 = coding method GRAI96	
	1 = coding method SGTIN96	4 = coding method GIAI96	
	2 = coding method SGLN96		
L	6…12		
F	**Coding**	**Filter value**	**Binary**
	SSCC96	All Others	000
		Undefined	001
		Logistical / Shipping Unit	010
	SGTIN96	All Others	000
		Retail Consumer Trade Item	001
		Standard Trade Item Grouping	010
		Single Shipping/ Consumer Trade Item	011
	SGLN	All Others	000
		Physical Location	001
	GRAI	All Others	000
	GIAI	All Others	000
P	0 = no verification; 1 = verification		
N1, N2	any		

Example 1

Field 1 ="00123456789012345675“ GS1-128 with AI00
Field 2 =AI(1;“00“) --> Printout: 123456789012345675
Field 3 =EPC(0;12;0;1;2) --> Printout: 3100DA7557D32C38E7000000

The EPC is calculated with the content of Field 2. The coding method SSCC96 is used. In Field 2 a valid NVE must be represented (18-digit, correct check digit).

Example 2

Field 1 ="41412345678901282541 23“ GS1-128 with AI00, AI254
Field 2 =AI(1;“414“) --> Printout: 1234567890128
Field 3 =AI(1;“254“) --> Printout: 123
Field 4 =EPC(2;10;0;0;2;3) --> Printout: 3208499602D218000000007B

The EPC is calculated with the content of Field 2 and Field 3. The coding method SGLN96 is used. In Field 2 a valid ILN must be represented (13-digit). In the example, Field 3 contains an optional serial number. No verification of check digit of ILN (8) is effected.

* only when using option RFID

8.14 Check Digit

SOH	BM	[n]	=	C	D	(	d	;	s	;	l	;	t	;	w	;	m	;	r	;	o	)	t1	t..	t70	ETB

= CD Identification of check digit

d Data for check digit calculation (field number of constant text)
Constant text is enclosed in "".

s Start position within data

1 …n Start calculation at digit x

l Number of digits. If the parameter is not indicated, the remaining data (from start position) is used for the check digit calculation.

t Check digit type

0 Modulo 10 (weighting 3)

1 Modulo 11

2 Modulo 43

3 Modulo 47 (weighting 15)

4 Modulo 47 (weighting 20)

5 Modulo 103

6 Customized

Optional parameters for customized check digit

w Weighting.
Constant text enclosed in "" - contains the individual weighting values or an interval.
Individual values: "x_1,x_2"
Interval: "x_1…x_2"

m Modulo

r Add result to

o Print only one digit

0 No

1 Yes

Example

Entry: =CD("123456789012";0;0;0)
Printout: 8

Entry: =CD("1234567890";0;0;6;"1,3";10;10;1)
Printout: 5

8.15 Substring

SOH	BM	[n]	=	S	S	(	d	;	s	;	l	)	ETB

= SS	Identification of substring
d	Data used for substring extraction (field number or field name or constant text. Constant text is enclosed in "".
s	Start position within data. If this parameter is omitted, the substring extraction starts with the 1st character of the data string. 1 n Start at digit x
l	Number of digits. If this parameter is omitted, all characters from the start position to the end of the data string are returned. 1 …n At the start position x digits

Example:

Entry:	=SS("1234567890";4;3)
Printout:	456
	Field "ARTIKELNR" has the contents "370012330295"
Entry:	=SS(ARTIKELNR;1;4)
Printout:	3700

9 Parameter Sets

9.1 Label Parameters

Set label photocell type

SOH	F	C	D	E	-	-	r	N	-	-	-	-	-	-	ETB

N: 0 = transmission photocell normal
N: 1 = reflection photocell
N: 2 = transmission photocell inverse
N: 3 = reflection photocell inverse
N: 4 = Ultrasonic photocell (option for 103/12, 104/12, 106/12, 106/24, 108/12, 162/12)

Enquire label photocell type

SOH	F	C	D	E	-	-	w	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB

Set label type

SOH	F	C	D	A	-	-	r	N	-	-	-	-	-	-	ETB

N: 0 = change to adhesive labels (automatically measure process)
N: 1 = change to continuous labels

Enquire label type

SOH	F	C	D	A	-	-	w	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB

Measure label

In case of loading a new label roll it is possible to start measuring by this command.

SOH	F	C	B	-	-	-	r	-	-	-	-	-	-	-	ETB

The current label and gap length in the printer can be sent to the Host computer:

SOH	F	C	B	-	-	-	w	p	p	p	p	p	p	p	ETB

After this command the printer sends the following answer:

Answer

SOH	A	E	E	E	E	S	S	S	S	p	p	p	p	p	p	p	p	ETB

EEEE = label length in mm (ASCII)
SSSS = gap length in mm (ASCII)

Set label length in 1/100 mm

SOH	F	C	C	L	-	-	r	N	N	N	N	N	N	N	-	ETB

N = value of label length in 1/100 mm, 7 digit ASCII number

Enquire label length in 1/100 mm

SOH	F	C	C	L	-	-	w	N	N	N	N	N	N	N	-	ETB

Answer

SOH	A	N	N	N	N	N	N	N	-	p	p	p	p	p	p	p	p	ETB

Set gap length in 1/100 mm

SOH	F	C	C	M	-	-	r	M	M	M	M	M	-	-	-	ETB

M = value of gap length in 1/100 mm, 5 digit ASCII number

Enquire gap length in 1/100 mm

SOH	F	C	C	M	-	-	w	M	M	M	M	M	-	-	-	ETB

Answer

SOH	A	M	M	M	M	M	-	-	-	p	p	p	p	p	p	p	p	ETB

Set label width in 1/100 mm

SOH	F	C	C	O	-	-	r	N	N	N	N	N	N	N	ETB

N = indication of label width in 1/100 mm, 7 digit ASCII number

Enquire label width in 1/100 mm

SOH	F	C	C	O	-	-	w	P	P	P	P	P	P	P	P	ETB

Answer

SOH	A	N	N	N	N	N	N	N	-	p	p	p	p	p	p	p	p	ETB

Set label error length in mm

SOH	F	C	D	G	A	-	r	N	N	N	-	-	-	-	-	ETB

NNN = indication of label error length in mm (1 … 999)

Enquire label error length

SOH	F	C	D	G	A	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set label synchronization

SOH	F	C	D	G	B	-	r	N	-	-	-	-	-	-	ETB

N: 0 = Off
N: 1 = On

Enquire label synchronization

SOH	F	C	D	G	B	-	w	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB

Set number of columns

SOH	F	C	C	H	A	-	r	N	-	-	-	-	-	-	ETB

N = number of columns (1…9)

Enquire number of columns

SOH	F	C	C	H	A	-	w	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB

Set column width

SOH	F	C	C	H	B	-	r	N	N	N	-	-	-	-	-	ETB

NNN = indication of column width in 1/10 mm (0 … 999)

Enquire column width

SOH	F	C	C	H	B	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set label alignment

SOH	F	C	C	J	-	-	r	N	-	-	-	-	-	-	-	ETB

N: 0 = left
N: 1 = centre
N: 2 = right

Enquire label alignment

SOH	F	C	C	J	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB

Set contrast

SOH	F	C	A	B	-	-	r	N	N	N	-	-	-	-	-	ETB

NNN: indication of contrast in % (010 … 200)
necessary to transmit a 3 digit ASCII number.

Enquire contrast

SOH	F	C	A	B	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set flip label

SOH	F	C	D	O	-	-	r	N	-	-	-	-	-	-	-	ETB

N: 0 = flip label Off
N: 1 = flip label On

Enquire flip label

SOH	F	C	D	O	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set rotate label

SOH	F	C	D	N	-	-	r	X	-	-	-	-	-	-	-	ETB

X: 0 = rotate label Off
X: 1 = rotate label On

Enquire rotate label

SOH	F	C	D	N	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	X	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set mode flip/rotate label

SOH	F	C	D	S	-	-	r	N	-	-	-	-	-	-	-	ETB

N: 0 = flip/rotate label at the centre point of label
N: 1 = flip/rotate label at the centre point of printhead

Enquire mode flip/rotate label

SOH	F	C	D	S	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set material selection

SOH	F	C	D	N	C	-	r	N	N	N	N	-	-	-	-	ETB

NNNN: indication of material
0 = type 1
1 = type 2

Enquire material selection

SOH	F	C	D	N	C	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set rotate label in 90 degrees

SOH	F	C	D	N	D	-	r	N	-	-	-	-	-	-	-	ETB

N: 0 = 0°
N: 1 = 90°
N: 2 = 180°
N: 3 = 270°

Enquire rotate label in 90 degrees

SOH	F	C	D	N	D	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set scan position

SOH	F	C	D	E	A	-	r	N	N	-	-	-	-	-	-	ETB

NN = indication of scan position in % of the set label length (01 … 99)
value depends on the label length

Enquire scan position

SOH	F	C	D	E	A	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set sensitivity of transmission photocell

SOH	F	C	D	E	B	-	r	N	N	N	-	-	-	-	-	ETB

NNN =indication of photocell sensitivity
3 digit ASCII number (001 … 255)

Enquire sensitivity of transmission photocell

SOH	F	C	D	E	B	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set sensitivity of reflexion photocell

SOH	F	C	D	E	C	-	r	N	N	N	-	-	-	-	-	ETB

NNN =indication of photocell sensitivity
NNN = 3 digit ASCII number (001 … 255)

Enquire sensitivity of reflexion photocell

SOH	F	C	D	E	C	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

9.2 Photocell

Enquire minimal measured level at label photocell (label parameter A)

SOH	F	C	M	A	A	-	w	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB

NNN = value of measured level, 3 digit ASCII number in 1/100 V

Enquire maximal measured level at label photocell (label parameter B)

SOH	F	C	M	A	B	-	w	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB

NNN = value of measured level, 3 digit ASCII number in 1/100 V

Set switching threshold at label photocell (label parameter C)

SOH	F	C	M	A	C	-	r	N	N	N	-	-	-	-	ETB

NNN = value of switching threshold, 3 digit ASCII number in 1/100 V
value is automatically calculated at measuring process at printer $(\text{min}+\frac{(\text{max}-\text{min})}{3})$

Enquire switching threshold

SOH	F	C	M	A	C	-	w	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB

NNN = value at measured switching threshold
3 digit ASCII number in 1/100 V

Enquire current value at transfer ribbon photocell

SOH	F	C	M	B	A	-	w	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB

N: 0 = transfer ribbon inserted
N: 1 = no transfer ribbon

Enquire current value at label photocell

SOH	F	C	M	B	B	-	w	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB

NNN: value at label photocell, 3 digit ASCII number in 1/100 V

Enquire condition of printhead photocell

SOH	F	C	M	B	C	-	w	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB

N: 0 = printhead up (open)
N: 1 = printhead down (closed)

Enquire status at dispenser photocell

SOH	F	C	M	B	E	A	w	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB

N: 0 = no label at photocell
N: 1 = label at photocell
Set switching threshold of dispenser photocell is taken into consideration.

9.3 Printer Parameters

Set print speed

SOH	F	C	A	A	-	-	r	N	N	N	-	-	-	-	-	ETB

NNN: Indication of print speed in mm/s
Spectra II 103/8 = 50 … 350
Spectra II 104/8 = 50 … 350
Spectra II 106/12 = 50 … 350
Spectra II 106/24 = 50 … 100
Spectra II 107/12 = 50 … 350
Spectra II 108/12 = 50 … 350
Spectra II 160/12 = 50 … 300
Spectra II 162/12 = 50 … 300
Spectra II 216/12 = 50 … 200
It is necessary to transmit a 3 digit ASCII number

Enquire print speed

SOH	F	C	A	A	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set transfer ribbon control On/Off

SOH	F	C	D	B	-	-	r	N	M	-	-	-	-	-	-	ETB

N: 1 = transfer ribbon control On
N: 0 = transfer ribbon control Off
M: 0 = weak sensibility
M: 1 = strong sensibility

Enquire transfer ribbon On/Off

SOH	F	C	D	B	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	M	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set ribbon saving On/Off

SOH	F	C	D	J	-	-	r	N	-	-	-	-	-	-	ETB

N: 0 = Off
N: 1 = On

Enquire ribbon saving On/Off

SOH	F	C	D	J	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set field handling

SOH	F	C	D	K	-	-	r	N	-	-	-	-	-	-	ETB

N: 0 = field handling Off
N: 1 = graphic received
N: 2 = delete graphic
N: 3 = restore graphic

Enquire field handling

SOH	F	C	D	K	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set printer language

SOH	F	C	D	I	-	-	r	N	-	-	-	-	-	-	ETB

N: 10 = German
N: 11 = English
N: 12 = French
N: 13 = Spanish
N: 14 = Finish
N: 15 = Czech
N: 16 = Portuguese
N: 17 = Netherlands
N: 18 = Italian
N: 19 = Danish
N: 10 = Polish
N: 11 = Greek
N: 12 = Hungarian
N: 13 = Russian
N: 14 = Chinese
N: 15 = not used
N: 16 = Ukrainian
N: 17 = Turkish
N: 18 = Swedish
N: 19 = Norwegian

Enquire printer language

SOH	F	C	D	I	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set external printer parameters

SOH	F	C	C	P	-	-	r	N	-	-	-	-	-	-	ETB

N: 0 = only parameter settings by interface for label length, gap length and label width are taken into consideration.
N: 1 = parameter settings by interface are processed
N: 2 = parameter settings by interface are not taken into consideration

Enquire external printer parameters

SOH	F	C	C	P	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set Codepage

SOH	F	C	C	N	-	-	r	N	-	-	-	-	-	-	ETB

N: 0 = Codepage 1252 West European (former ANSI)
N: 1 = Codepage 437 English
N: 2 = Codepage 850 Western European
N: 3 - 8 = not used
N: 9 = Codepage 852 Slavic
N: 10 = Codepage 857 Turkish
N: 11 = Codepage 1250 Central and East European
N: 12 = Codepage 1251 Cyrillic
N: 13 = Codepage 1253 Greek
N: 14 = Codepage 1254 Turkish
N: 15 = Codepage 1257 Baltic
N: 16 = WGL4 (UTF-8 coded data transmission)

Please find the tables referring to the above mentioned character sets on www.carl-valentin.de/Downloads.

Enquire Codepage

SOH	F	C	C	N	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set customized entry

SOH	F	C	D	U	-	-	r	N	-	-	-	-	-	-	ETB

N: 0 = Off — No question appears at the display. In this case the stored default value is printed.

N: 1 = On — The question referring the customized variable appears once before the print start at the display.

N: 2 = Auto — The question referring the customized variable appears again after print end. Additionally a query appears demanding the number of copies that should be print.

N: 3 = Auto — without quantity:
The question referring the customized variable appears again after print end. However, the same number of copies is printed. This number was defined once at the start of the print order.

Enquire customized entry

SOH	F	C	D	U	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set keyboard layout

SOH	F	C	C	K	-	-	r	N	-	-	-	-	-	-	ETB

N: 0 = German
N: 1 = English
N: 2 = French
N: 3 = Greek
N: 4 = Spanish
N: 5 = Swedish
N: 6 = US American
N: 7 = Russian

Enquire keyboard layout

SOH	F	C	C	K	-	-	w	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set sound level of key click (buzzer)

SOH	F	C	C	B	-	-	w	p	p	p	p	p	p	p	p	ETB

N: 0 = buzzer Off

N: 1-7 = sound level of key click

Enquire sound level of key click (buzzer)

SOH	F	C	C	B	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set hotstart On/Off

SOH	F	C	D	W	-	-	r	N	-	-	-	-	-	-	-	ETB

N: 0 = Off
N: 1 = On

Enquire hotstart On/Off

SOH	F	C	D	W	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set autoload

SOH	F	C	D	X	-	-	r	N	-	-	-	-	-	-	ETB

N: 0 = Off
N: 1 = On

Enquire autoload

SOH	F	C	D	X	-	-	w	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set standard label On/Off

SOH	F	C	M	K	E	-	r	N	-	-	-	-	-	-	ETB

N: 0 = Off (default) - print start without label definition signalizes error
N: 1 = On - standard label is printed without label definition

Enquire standard label On/Off

SOH	F	C	M	K	E	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set backfeed operating mode

SOH	F	C	M	R	A	-	r	N	-	-	-	-	-	-	ETB

N: 0 = standard
N: 1 = automatic
N: 2 = no backfeed
N: 3 = optimized

Enquire backfeed operating mode

SOH	F	C	M	R	A	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	P	p	p	p	p	p	ETB

Set backfeed delay

SOH	F	C	M	R	B	-	r	N	N	N	-	-	-	-	-	ETB

NNN: indication of delay time, 3 digit ASCII number in 1/100s

Enquire backfeed delay

SOH	F	C	M	R	B	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set label change confirmation

SOH	F	C	S	D	F	C	r	N	-	-	-	-	-	-	-	ETB

N: 0 = Off
N: 1 = On

Enquire label change confirmation

SOH	F	C	S	D	F	C	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set label synchronization at switching on

SOH	F	C	C	A	-	-	r	N	-	-	-	-	-	-	-	ETB

N: 0 = Off
N: 1 = Measure
N: 2 = Label feed

Enquire synchronization at switching on

SOH	F	C	C	A	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set CMI length

SOH	F	C	D	J	C	-	r	N	-	-	-	-	-	-	-	ETB

NNN: value that the labels are retracted at a stop
3 digit ASCII number in 1/100 mm (000 … 100)

Enquire CMI length

SOH	F	C	D	J	C	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

9.4 Interface

By means of the following commands the parameters of the serial interface can be set. Note that after sending one of the commands also the host computer changes the corresponding parameter of its interface to allow further communication of host computer-printer.
For all interface commands the interface is fixed with x. The following values are allowed:
x = 1 ⇒ COM 1
x = 2 ⇒ COM 2
In all other cases automatically the first serial interface is addressed.
In the answers the addressed interface is also returned.

Set all interface parameters

SOH	F	C	F	F	x	-	r	m	;	b	;	p	;	d	;	s	ETB

m = mode (0 = Off, 1 = On, 2 = On, without error message)
b = baud rate (2400, 4800, 9600, 19200, 38400, 115200)
p = parity (n = no parity, e = even parity, o = odd parity)
d = number of data bits (7, 8)
s = number of stop bits (1, 2)

Enquire all interface parameters

SOH	F	C	F	F	x	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	x	;	m	;	b	;	p	;	d	;	s	;	p	p	p	p	p	p	p	p	ETB

Example: activate interface COM1 and set 9600 Baud, no parity, 8 data bits, 2 stop bits
[SOH]FCFF1-r1;9600;n;8;2[ETB]

Interface protocol

There are two different interface protocols available. Usually SOH = 01_{Hex} and
ETB = 17_{Hex}. However there are host computers (e.g. AS/400), which cannot work with these characters. Therefore you can switch SOH = $5E_{Hex}$ and ETB = $5F_{Hex}$. The host computer has to change the corresponding parameter as well.

Set SOH and ETB

SOH	F	C	G	C	-	-	r	N	-	-	-	-	-	-	ETB

N: 0 = SOH = 01_{Hex}, ETB = 17_{Hex}
N: 1 = SOH = $5E_{Hex}$, ETB = $5F_{Hex}$

Enquire SOH and ETB

SOH	F	C	G	C	-	-	W	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

N: 0 = SOH = 01_{Hex}, ETB = 17_{Hex}
N: 1 = SOH = $5E_{Hex}$, ETB = $5F_{Hex}$
N: 2 = other character combination

Data memory

Set data memory

SOH	F	C	G	D	-	-	r	M	-	-	-	-	-	-	ETB

M: 0 = Off, after receiving FBCA0r or FBDA0r the interface is locked until the end of the print order, i.e. you cannot write more data in the receiving buffer.

M: 1 = Off, after receiving FBCA0r or FBDA0r the interface is locked until the end of the print order, i.e. you cannot write more data in the receiving buffer.

M: 2 = Extended, after starting a print order it is possible to write more data in the receiving buffer. These data is processed during the print and the next label is prepared.

Enquire data memory

SOH	F	C	G	D	-	-	W	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	M	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set reaction to unknown interrogative set

SOH	F	C	G	E	A	-	r	N	-	-	-	-	-	-	ETB

N = value range between 0 and 3

Enquire reaction to unknown questions

SOH	F	C	G	E	A	-	w	p	p	p	p	p	p	P	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

9.5 Network

SOH	F	C	L	A	-	-	r	C	0	A	8	0	0	1	5	ETB

All network parameter sets start in the third column with a 'L'. Column 4 shows the identification for the corresponding network parameter. Column 5 can show another sub-identification.

Because of the fact that the argument size is limited to 8 characters, the IP addresses (IP address, network mask, gateway address) which consist of 32 bit are transmitted in HEX presentation.
For all data which is transmitted in HEX presentation (also the MAC address) it is allowed to use capital as well as small letters.

In contrary to the parameter settings of the other interfaces, the settings of the following sets were saved immediately onto Flash, i.e. it is not necessary to save the currently set configuration before switching off the printer so the modifications are still available after switching on.

So that the made modifications become active, also without printer Reset it is necessary to transmit a corresponding Z set which effects a Reset of the network devices.

Set IP address (e.g. 192.168.0.21)

SOH	F	C	L	A	-	-	r	C	0	A	8	0	0	1	5	ETB

Enquire IP address

SOH	F	C	L	A	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	C	0	A	8	0	0	1	5	p	p	p	p	p	p	p	p	ETB

Set netmask (e.g. 255.255.255.0)

SOH	F	C	L	B	-	-	r	F	F	F	F	F	F	0	0	ETB

Enquire netmask

SOH	F	C	L	B	-	-	w	F	F	F	F	F	F	0	0	ETB

Answer

SOH	A	F	F	F	F	F	F	0	0	p	p	p	p	p	p	p	p	ETB

Set Gateway address (e.g. 192.168.0.1)

SOH	F	C	L	C	-	-	r	C	0	A	8	0	0	0	1	ETB

Enquire Gateway address

SOH	F	C	L	C	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	C	0	A	8	0	0	0	1	p	p	p	p	p	p	p	p	ETB

Set transmission mode (e.g. auto recognition)

SOH	F	C	L	D	-	-	r	0	-	-	-	-	-	-	ETB

0 = auto recognition
1 = 10 MBit/s half duplex
2 = 10 MBit/s full duplex
3 = 100 MBit/s half duplex
4 = 100 MBit/s full duplex

Enquire transmission mode

SOH	F	C	L	D	-	-	w	0	-	-	-	-	-	-	ETB

Answer

SOH	A	0	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set DHCP support

SOH	F	C	L	E	-	-	r	N	ETB

N: 0 = Off
N: 1 = On

Enquire DHCP support

SOH	F	C	L	E	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Assign printer name

SOH	F	C	L	F	-	-	R	N	N	N	N	N	N	N	N	N	N	ETB

N = printer name can consist of max. 11 characters
N = [A…Z, a…z, 0…9, -, -]

Enquire printer name

SOH	F	C	L	F	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	N	N	N	N	;	p	p	p	p	p	p	p	p	ETB

Set MAC address (e.g. 00-07-4A-43-19-08)

SOH	F	C	L	M	B	-	r	0	0	0	7	4	A	-	-	ETB

SOH	F	C	L	M	A	-	r	4	3	1	9	0	8	-	-	ETB

SOH	F	C	L	M	C	-	r	0	0	0	7	4	A	1	9	0	8	ETB

A MAC address has a width of 48 bit and is normally indicated in hexadecimals.

With a B record it is possible to modify our identification of the MAC address. All our machines start with 00-07-4A as default. This corresponds to the Memory-Pool which the MAC address committee assigned to us to guarantee that the MAC address is world-wide manufacturer-spreading unique.

With the A record any address can be set in our pool.

With the C record any address in our pool and the identification of the MAC address can be set/changed at the same time.

Enquire MAC address

SOH	F	C	L	M	B	-	w	p	p	p	p	p	p	p	p	ETB

SOH	F	C	L	M	A	-	w	p	p	p	p	p	p	p	p	ETB

SOH	F	C	L	M	C	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	0	0	0	7	4	A	-	-	p	p	p	p	p	p	p	p	ETB

SOH	A	4	3	1	9	0	8	-	-	p	p	p	p	p	p	p	p	ETB

SOH	A	0	0	0	7	4	A	4	3	1	9	0	8	p	p	p	p	p	p	p	p	ETB

NTP Server

NTP (Network Time Protocol) is a standardized Internet protocol permitting the synchronization of real-time clocks of network participants. The printer connects itself with a time server and align every 60 minutes its internal real-time clock with that of the time server in order to correct possible differences.
The address of server (IP address) can be freely configured in the printer. The communication is effected by UDP and the fixed set port 123. The service in the printer is deactivated by transmitting the server address 0.0.0.0.
The time servers work together with the coordinated world time (UTC) and therefore an additional time shift is needed compared to the reference time. For Germany it is e.g. +1 hour.
The current state of the connexion can be queried with a status set.

Set NTP Server IP

SOH	F	C	L	N	I	-	r	N	ETB

N = X.X.X.X (X = 0 … 255)

Enquire NTP Server IP

SOH	F	C	L	N	I	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	N	N	N	N	N	p	p	p	p	p	p	p	p	ETB

0.0.0.0 deactivates the NTP service

Readout NTP status

SOH	F	C	L	N	S	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

N: 0 = Off
N: 1 = OK
N: 2 = Error

Set time zone (hour offset)

SOH	F	C	L	N	Z	-	r	N	ETB

N: -12, 12

Enquire time zone (hour offset)

SOH	F	C	L	N	Z	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	N	N	N	N	N	p	p	p	p	p	p	p	p	ETB

Reset Network Device

SOH	F	C	L	Z	-	-	r	--------	ETB

For this set is no enquiry possible. This set causes that modifications made by the transfer of the previous sets become effective.

9.6 Offset Values

Set Y offset

SOH	F	C	C	D	-	-	r	V	N	N	N	-	-	-	-	ETB

V = offset prefix (+ or −)
NNN = offset value, 3 digit ASCII number in 1/10 mm

Enquire Y offset

SOH	F	C	C	D	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	V	N	N	N	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set X offset

SOH	F	C	C	E	-	-	r	V	N	N	N	-	-	-	-	ETB

V = offset prefix (+ or −)
NNN = offset value, 3 digit ASCII number in 1/10 mm

Enquire X offset

SOH	F	C	C	E	-	-	w	p	P	p	p	p	p	p	p	ETB

Answer

SOH	A	V	N	N	N	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set tear-off edge (Offset 4)

SOH	F	C	C	G	-	-	r	V	N	N	N	-	-	-	-	ETB

V = offset prefix (always +)
NNN = offset value, 3 digit ASCII number in 1/10 mm

Enquire tear off offset

SOH	F	C	C	G	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	V	N	N	N	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set cutter offset

SOH	F	C	S	C	A	-	r	V	N	N	N	-	-	-	-	ETB

V = offset prefix (always +)
NNN = offset value, 3 digit ASCII number in 1/10 mm

Enquire cutter offset

SOH	F	C	S	C	A	-	w	p	P	p	p	p	p	p	p	ETB

Answer

SOH	A	V	N	N	N	-	-	-	-	p	p	p	p	p	p	p	-	ETB

Set dispenser offset

SOH	F	C	S	D	A	-	r	V	N	N	N	-	-	-	-	ETB

V = offset prefix (always +)
NNN = offset value, 3 digit ASCII number in 1/10 mm

Enquire dispenser offset

SOH	F	C	S	D	A	-	w	P	p	p	p	p	p	p	p	ETB

Answer

SOH	A	V	N	N	N	-	-	-	-	p	p	p	p	p	p	p	p	ETB

9.7 Service Functions

Set zero point adjustment (Y value)

SOH	F	C	C	R	-	-	r	V	N	N	N	-	-	-	-	ETB

Enquire zero point adjustment (Y value)

SOH	F	C	C	R	-	-	w	p	p	p	p	p	p	p	p	ETB

V: offset prefix (+ or −)
NNN: offset value
3 digit ASCII number in 1/100 mm (-999 … +999)

Answer

SOH	A	V	N	N	N	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set zero point adjustment (X value)

SOH	F	C	C	T	-	-	r	V	N	N	N	-	-	-	-	ETB

Enquire zero point adjustment (X value)

SOH	F	C	C	T	-	-	w	p	p	p	p	p	p	p	p	ETB

V: offset prefix (+ or −)
NNN: offset value
NNN: 3 digit ASCII number in 1/100 mm (-999 … +999)

Answer

SOH	A	V	N	N	N	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set Online / Offline

SOH	F	C	M	K	C	-	r	M	-	-	-	-	-	-	-	ETB

M: 0 = Offline Off
M: 1 = Offline On

Enquire Online / Offline

SOH	F	C	M	K	C	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	M	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

After changing by interface the display is automatically new initialized (by activated online/offline changing to online indication).

Set reprint action

SOH	F	C	M	K	D	-	r	N	-	-	-	-	-	-	ETB

Enquire reprint action

SOH	F	C	M	K	D	-	w	p	p	p	p	p	p	p	ETB

N: 0 = complete reprint
N: 1 = empty reprint

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB

Set winder output

SOH	F	C	M	P	-	-	r	N	-	-	-	-	-	-	ETB

N: 0 = Off
N: 1 = On

Enquire winder output

SOH	R	C	M	P	-	-	W	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB

Set printhead down (closed)

SOH	F	C	M	B	C	-	w	p	p	p	p	p	p	p	ETB

N: 1

Set printhead up (open)

SOH	F	C	M	B	D	-	w	p	p	p	p	p	p	p	ETB

N: 1

Enquire status of printhead locking

SOH	F	C	M	C	A	-	w	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	P	p	p	p	ETB

N: 0 = locking open
N: 1 = locking closed

Enquire printhead temperature

SOH	F	C	M	C	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

NNN = value of temperature, 3 digit ASCII number in degrees

Set transfer ribbon prior warning

SOH	F	C	M	L	A	-	r	N	-	-	-	-	-	-	-	ETB

N: 0 = Off
N: 1 = On

Enquire transfer ribbon prior warning

SOH	F	C	M	L	A	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	P	p	p	p	p	ETB

Set diameter for transfer ribbon prior warning

SOH	F	C	M	L	B	-	r	N	N	N	-	-	-	-	-	ETB

NNN = 030 … 090 diameter in mm

Enquire transfer ribbon prior warning

SOH	F	C	M	L	B	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Readout current transfer ribbon diameter

SOH	F	C	M	L	C	-	w	-	-	-	-	-	-	-	-	ETB

Answer

SOH	A	N	N	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set mode for transfer ribbon prior warning

SOH	F	C	M	L	D	A	r	N	-	-	-	-	-	-	-	ETB

N: 0 = Warning
N: 1 = Reduced speed
N: 2 = Error

Enquire mode for transfer ribbon prior warning

SOH	F	C	M	L	D	A	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set reduced speed (ribbon prior warning)

SOH	F	C	M	L	D	B	r	N	N	N	-	-	-	-	-	ETB

NNN = V_{min} … V_{max}: reduced print speed
(depending on printer type)

Enquire reduced speed (ribbon prior warning)

SOH	F	C	M	L	D	B	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set printhead resistance

SOH	F	C	M	G	-	-	r	N	N	N	N	N	-	-	-	ETB

NNNNN = value of resistance in Ohm.

Enquire printhead resistance

SOH	F	C	M	G	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	N	N	-	-	-	p	p	p	p	p	p	p	p	ETB

Set print length correction

SOH	F	C	M	T	-	-	r	V	N	N	N	-	-	-	-	ETB

V: offset prefix (+ or −)
NNN: print length correction value
3 digit ASCII number in 1/10 % (-100 … +100)

Enquire print length correction

SOH	F	C	M	T	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	V	N	N	N	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set custom logo

SOH	F	C	N	R	A	-	r	N	-	-	-	-	-	-	ETB

N: 0 = Off
N: 1 = On

Enquire custom logo

SOH	F	C	N	R	A	-	w	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Paper counter

The paper counter (kilometer value) of printer as well as of printhead can only be enquired by interface and not reset to 0.

Enquire paper counter of printer

SOH	F	C	H	A	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	N	N	N	N	N	p	p	p	p	p	p	p	p	ETB

Enquire paper counter of printhead

SOH	F	C	H	B	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	N	N	N	N	N	p	p	p	p	p	p	p	p	ETB

NNNNNNNN = kilometer value of printer and/or printhead in meters
(e.g. '00000123' = 123 m)

9.8 Date & Time

Set date

SOH	F	C	I	A	-	-	r	D	D	M	O	Y	Y	D	W	ETB

DD = day of month
MO = month
YY = year
DW = day of week ('00' = Sunday)

Enquire date

SOH	F	C	I	A	-	-	w	p	p	p	p	p	p	p	ETB

Answer

SOH	A	D	D	M	O	Y	Y	D	W	p	p	p	p	p	p	p	p	ETB

Set time

SOH	F	C	I	B	-	-	r	H	H	M	I	S	S	A	M	ETB

HH = hours
MI = minutes
SS = seconds
AM = mode ('am' = 12 hours mode AM, 'pm' = 12 hours mode PM, '—' = 24 hours mode)

Enquire time

SOH	F	C	I	B	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	H	H	M	I	S	S	A	M	p	p	p	p	p	p	p	p	ETB

Automatically adjust clock for daylight saving changes

Because of the fact that there is no world-wide regulation if and when a changing of time between summer and wintertime (normal time) in the individual countries takes place, we distinguish between the following four formats for the definition for beginning and end of summertime.

F 0:	European format start of summertime = last Sunday in March end of summertime = last Sunday in October **W:** week (1 = first, …, 5 = last) **WD:** day of week (0 = Sunday, …, 6 = Saturday) **MM:** month (01 = January, …, 12 = December)
F 1:	Fix date with indication of year **DD:** day **MM:** month (01 = January, …, 12 = December) **YY:** year
F 2:	Fix date without indication of year **DD:** day **MM:** month (01 = January, …, 12 = December)
F 3:	Week day after day in month **WD:** day of week (0 = Sunday, …, 6 = Saturday) **DD:** after day (only the first day is taken into **MM:** consideration) month (01 = January, …, 12 = December)

Set automatically adjust clock for daylight saving changes

SOH	F	C	I	G	-	-	r	N	-	-	-	-	-	-	ETB

Enquire automatically adjust clock for daylight saving changes

SOH	F	C	I	G	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

N: 0 = Automatically adjust clock for daylight saving changes Off
N: 1 = Automatically adjust clock for daylight saving changes On

Set beginning of summertime

F 0: SOH F C I H - - r F W ; WD ; M M ; H H ; M M ETB

F 1: SOH F C I H - - r F D D ; M M ; Y Y ; H H ; M M ETB

F 2: SOH F C I H - - r F D D ; M M ; H H ; M M ETB

F 3: SOH F C I H - - r F WD ; D D ; M M ; H H ; M M ETB

Enquire beginning of summertime

SOH F C I H - - w p p p p p p p p ETB

Answer

SOH A F W W D M M p p p p p p p p ETB

The answer depends on each set format.

Set end of summertime

F 0: SOH F C I I - - r F W ; WD ; M M ; H H ; M M ETB

F 1: SOH F C I I - - r F D D ; M M ; Y Y ; H H ; M M ETB

F 2: SOH F C I I - - r F D D ; M M ; H H ; M M ETB

F 3: SOH F C I I - - r F WD ; D D ; M M ; H H ; M M ETB

Enquire end of summertime

SOH F C I I - - w p p p p p p p p ETB

Answer

SOH A F W W D M M p p p p p p p p ETB

The answer depends on each set format.

Set time shifting

SOH F C I J - - r N N N - - - - - ETB

NNN = minutes

Enquire time shifting

SOH F C I J - - w p p p p p p p p ETB

Answer

SOH A N N N p p p p p p p p ETB

9.9 Password

Set password

SOH	F	C	K	A	-	-	r	N	N	N	N	-	-	-	-	ETB

NNNN = input of password
4 digit ASCII number in mm (0000 … 9999)

Enquire password

SOH	F	C	K	A	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set function group

SOH	F	C	K	B	-	-	r	A	B	C	D	E	-	-	-	ETB

A: Function menu
0 = free
1 = blocked

B: CF card
0 = free
1 = reading only
2 = access blocked

C: Entry
0 = free
1 = masks blocked only
2 = no entry possible

D: Printer guiding
0 = free
1 = number of copies menu possible
2 = no manual print release

E: Favorites menu
0 = free
1 = blocked

Enquire function group

SOH	F	C	K	B	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	a	b	c	d	e	-	-	-	p	p	p	p	p	p	p	p	ETB

Set password active

SOH	F	C	K	C	-	-	r	N	-	-	-	-	-	-	ETB

N: 0 = inactive (N in display)
N: 1 = active (J in display)

Enquire password active

SOH	F	C	K	C	-	-	w	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set password function menu

SOH	F	C	K	D	A	-	r	N	N	N	N	-	-	-	-	ETB

NNNN = input of password
4 digit ASCII number in mm (0000 … 9999)

Enquire password function menu

SOH	F	C	K	D	A	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set password favorites menu

SOH	F	C	K	D	B	-	r	N	N	N	N	-	-	-	-	ETB

NNNN = input of password
4 digit ASCII number in mm (0000 … 9999)

Enquiere password favorites menu

SOH	F	C	K	D	B	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set password memory card

SOH	F	C	K	D	C	-	r	N	N	N	N	-	-	-	-	ETB

NNNN = input of password
4 digit ASCII number in mm (0000 … 9999)

Enquire password memory card

SOH	F	C	K	D	C	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set password printing manually

SOH	F	C	K	D	D	-	r	N	N	N	N	-	-	-	-	ETB

NNNN = input of password
4 digit ASCII number in mm (0000 … 9999)

Enquire printing manually

SOH	F	C	K	D	D	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	p	ETB

9.10 Compact Flash Card

Save a label onto Compact Flash card

SOH	F	M	A	O	-	-	r	P	ETB

O: In case a label with the entered name exists already then the label is overwritten without an enquiry. If you enter another value as 0, an enquiry appears demanding if you want to overwrite.
P: File name of the label which is to save. Drive and path name are optional, i.e. the file name is allowed to have more than 8 characters but is limited to 79.

Load a file from Compact Flash card

SOH	F	M	B	-	-	-	r	P	ETB

P: File name of the layout which is to load. Drive and path name are optional, i.e. the file name is allowed to have more than 8 characters but is limited to 79.

Delete a layout from Compact Flash card

SOH	F	M	C	-	-	-	r	P	ETB

P: File name of the layout which is to delete. Drive and path name are optional, i.e. the file name is allowed to have more than 8 characters but is limited to 79.

Format Compact Flash card

SOH	F	M	D	-	-	-	r	P	ETB

P: Optional drive identification with colon (e.g. A:).
In case no drive is indicated, then the currently selected is formatted.

Readout contents of CF card

SOH	F	M	G	O	-	-	r	P	ETB

O: In case O is indicated, no error messages are displayed at the printing display e.g. if no card is inserted.
P: Optional drive identification with colon (e.g. A:).
Fin case no drive is indicated, then the currently selected is read out.

Answer

SOH	File name/directory name	ETB

A list of all file entries is indicated, each entry is included in (SOH) and (ETB).

Readout free memory space

SOH	F	M	H	O	-	-	w	X	p	p	p	p	p	p	p	ETB

O: In case O is indicated, no error messages are displayed at the printing display e.g. if no card is inserted.
X = Drive [A,B] (optional)

Answer

SOH	A	X	n	n	n	n	-	-	-	p	p	p	p	p	p	p	p	ETB

X = Drive [A,B]
n = Memory space in KB

Create directory

SOH	F	M	I	O	-	-	r	P	ETB

O: In case a label with the entered name already exists, then it is overwritten without an enquiry.
If you enter another value as O, an enquiry appears demanding if you want to overwrite.
P = Drive and path indication

Delete directory

SOH	F	M	J	-	-	-	r	P	ETB

P = Drive and path indication

NOTICE!

The current directory cannot be deleted.

Delete directory path

SOH	F	M	J	A	-	-	r	P	ETB

Deletes the indicated directory including all containing sub-directories and files.

Change standard directory

SOH	F	M	K	-	-	-	r	P	ETB

P = Drive and path indication

Readout current directory

SOH	F	M	K	-	-	-	w	ETB

Answer

SOH	A	P	ETB

P = Current directory

Set standard directory for file selection via I/O

SOH	F	M	K	B	-	-	r	N	ETB

N = directory path

Enquire standard directory for file selection via I/O

SOH	F	M	K	B	-	-	w	p	p	p	p	p	p	p	p	ETB

Antwort

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Transfer file

SOH	F	M	L	-	-	-	w	P	ETB

P: File name of file which is to transfer. Drive name and path name are optional, i.e. the file name is allowed to have more than 8 characters but is limited to 79.

Answer

SOH	A	F	*	S	ETB	Data

F = File name
S = File size in Byte
Data = Binary data

Enquiry if the file exists

SOH	F	M	M	-	-	-	w	P	ETB

P: File name of file which is to transfer. Drive name and path name are optional, i.e. the file name is allowed to have more than 8 characters but is limited to 79.

Answer

SOH	A	X	P	ETB	Daten

X: 0 = File does not exist
1 = File exists
P = File name

Readout size of Compact Flash card

SOH	F	M	P	O	-	-	w	X	ETB

O: In case O is indicated, no error messages are displayed at the printing display e.g. if no card is inserted.
X: Drive [A,B] (optional)

Answer

SOH	A	D	n	n	n	n	-	-	-	X	ETB

X = Drive [A,B]
n = Memory in KB
D = enquired drive

Drive status

SOH	F	M	S	-	-	-	w	X	ETB

X - Drive [A,B]

Answer

SOH	A	X	S	ETB

X = Drive [A,B]
S = Status
0: no storage medium
1: not formatted
2: ready
3: not determinable

9.11 Printing

Set number of lines (n digits)

SOH	F	B	A	A	-	-	r	N	ETB

N = number of lines in ASCII (1, 10, 100, …)

Enquire number of lines

SOH	F	B	A	A	-	-	w	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Start/Stop Command

In addition to the actual start/stop command, the print order can also be interrupted via the parameter/remote record.

SOH	F	D	-	-	-	-	r	N	-	-	-	-	-	-	-	ETB

N: 0 = stop printing
N: 1 = continue printing
N: 2 = cancel print order if it is already stopped

Reset error

Reset error

SOH	F	C	M	H	-	-	r	N	N	N	N	-	-	-	-	ETB

NNNN = current error ID or '9999'

Enquire error

SOH	F	C	M	H	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	N	0	0	0	0	p	p	p	p	p	p	p	p	ETB

Readout error ID and error text

SOH	F	C	M	H	A	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	N	;	error text	;	p	p	p	p	p	p	p	p	ETB

Item number of print order

By means of this command the Host computer can enquire following item numbers:

Total number of current print order

SOH	F	B	B	A	-	-	w	p	p	p	p	p	p	p	ETB

Number of labels which are still to print

SOH	F	B	B	B	-	-	w	p	p	p	p	p	p	p	ETB

Number of already printed labels

SOH	F	B	B	C	-	-	w	p	p	p	p	p	p	p	ETB

Interval in cutter mode

SOH	F	B	B	D	-	-	w	p	p	p	p	p	p	p	ETB

At the end of one of these commands the printer returns the corresponding number as ASCII value
(4 res. 5 digits) in the answer set.

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	p	ETB

With this set it is also possible to transmit the item number of print order and the interval (in cutter mode) to the printer.

Item number of print order

SOH	F	B	B	A	-	-	r	N	N	N	N	N	-	-	-	ETB

NNNNN = 5 digits item number of order

Interval in cutter mode

SOH	F	B	B	D	-	-	r	N	N	N	N	-	-	-	-	ETB

NNNNN = interval

Start printing

SOH	F	B	C	-	-	-	r	S	-	-	-	-	-	-	ETB

This command starts the print order which is actually set in the printer. The current parameters such as print mode, speed, initialization etc. are used.

S = x: sorted (e.g. pages 1-5, then again 1-5 etc. are printed)
S = 1: unsorted (page 1 is printed x times, then page 2 x times, etc.)

SOH	F	B	D	-	-	-	r	S	-	-	-	-	-	-	ETB

Start printing (see above) but without tear off offset.

SOH	F	B	E	-	-	-	r	n	n	n	n	n	n	n	ETB

With this command the printjob identifier which appears in "printing" res. "stopped" window is assigned to a print order. If only blanks are transmitted, then the printjob identifier is deleted and the display shows "noname".

Initialization of page handling

SOH	F	B	F	-	-	-	r	ETB

Selection of current page

SOH	F	B	G	-	-	-	r	P	ETB

P = current page number [1… 9]

Select order of pages to be printed

SOH	F	B	H	-	-	-	r	P_1	P_2	P_3	ETB

P_1; P_2;…= pages to be printed

Generation of page without print start

SOH	F	B	I	-	-	-	r	S	ETB

With this command the corresponding page is only generated, i.e. no print start signal is sent.

S = x: sorted (e.g. pages 1-5, then again 1-5 etc. are printed)
S = 1: unsorted (page 1 is printed x times, then page 2 x times, etc.)

Feed

Parameter set to release a feed

SOH	F	E	-	-	-	-	r	-	-	-	-	-	-	-	ETB

Test print

Parameter set to release a test print

SOH	F	F	-	-	-	-	r	-	-	-	-	-	-	-	ETB

Status print

Parameter set to print a status print

SOH	F	C	M	Q	-	-	r	N	-	-	-	-	-	-	ETB

N: 0 = printer settings
N: 1 = bar codes
N: 2 = fonts

Cancel print orders

Parameter set to cancel all active print orders

SOH	F	G	A	-	-	-	r	N	-	-	-	-	-	-	-	ETB

N: - = Cancel active print orders and delete all label data

N: 1 = Cancel active print orders and receive label data

With the execution of this command:

- possible upcoming errors are confirmed
- possible upcoming customized entries are cancelled

9.12 Emulation

Set emulation

SOH	F	Z	-	-	-	-	r	N	-	-	-	-	-	-	-	ETB

N: 0 = CVPL (Carl Valentin Programming Language)
N: 1 = ZPL II® (Zebra Programming Language)

Enquire emulation

SOH	F	Z	-	-	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

10 Parameter Sets for Options

10.1 WLAN (Wireless Local Area Network)

Enquire connection status

SOH	F	C	W	C	-	-	w	p	p	p	p	p	p	p	ETB

N: 0 = not connected
N: 1 = connected

Answer

SOH	A	N	i	p	p	p	p	p	p	p	p	ETB

Set DHCP support

SOH	F	C	W	D	-	-	r	x	ETB

x: 0 = Offs
x: 1 = On

Enquire DHCP support

SOH	F	C	W	D	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	x	i	p	p	p	p	p	p	p	p	ETB

Set encryption type

SOH	F	C	W	E	-	-	r	x	ETB

x: 0 = Off
x: 1 = WEP64
x: 2 = WEP128
x: 3 = WPA
x: 4 = WPA2

Enquire encryption type

SOH	F	C	W	E	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	x	;	p	p	p	p	p	p	p	p	ETB

Readout MAC address

SOH	F	C	W	F	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	;	p	p	p	p	p	p	p	p	ETB

N: Character string

Set Gateway address (e.g. 192.168.1.2)

SOH	F	C	W	G	-	-	r	x	ETB

x = 192.168.1.2

Enquire Gateway address

SOH	F	C	W	G	-	-	w	p	p	p	p	p	p	p	ETB

Answer

SOH	A	1	9	2	.	1	6	8	.	1	.	2	;	p	p	p	p	p	p	p	p	ETB

Set IP address (e.g. 192.168.1.21)

SOH	F	C	W	I	-	-	r	x	ETB

x = 192.168.1.21

Enquire IP address

SOH	F	C	W	I	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	1	9	2	.	1	6	8	.	1	.	2	1	;	p	p	p	p	p	p	p	p	ETB

Set WPA/WPA2 encryption

SOH	F	C	W	K	-	-	r	x	ETB

x = Hex string, 64 characters or ASCII, max. 63 characters

Answer

SOH	A	x	;	ETB

Set netmask (e.g. 255.255.255.0)

SOH	F	C	W	M	-	-	r	x	ETB

x = 255.255.255.0

Enquire netmask

SOH	F	C	W	M	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	2	5	5	.	2	5	5	.	2	5	5	.	0	;	p	p	p	p	p	p	p	p	ETB

Enquire server port (e.g. 9001)

SOH	F	C	W	P	-	-	w	p	p	p	p	p	p	p	p	ETB

Value range for x = 1 … 65535

Answer

SOH	A	9	0	0	1	;	p	p	p	p	p	p	p	p	ETB

Readout anew configuration from WLAN module and transfer to the printer

SOH	F	C	W	R	-	-	r	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	;	p	p	p	p	p	p	p	p	ETB

N: OK
N: Error

Set SSID (Service Set Identifier) identification (e.g. TESTWLAN)

SOH	F	C	W	S	-	-	r	x	ETB

x = TESTWLAN

Enquire SSID identification

SOH	F	C	W	S	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	T	E	S	T	W	L	A	N	;	p	p	p	p	p	p	p	p	ETB

Set WEP64 encryption

SOH	F	C	W	V	-	-	r	x	ETB

x = Hex string, 10 characters

Answer

SOH	A	x	;	ETB

Set WEP128 encryption

SOH	F	C	W	W	-	-	r	x	ETB

x = Hex string, 26 characters

Answer

SOH	A	x	;	ETB

Save settings and restart of WLAN module

SOH	F	C	W	X	-	-	r	-	-	-	-	-	-	-	ETB

Answer

SOH	A	N	i	p	p	p	p	p	p	p	p	ETB

N: OK
N: Error

Set high speed data connection

SOH	F	C	W	H	-	-	r	x	ETB

This setting is specified at the printer and if an active connection to the WLAN module exists, in the WLAN module, too. Subsequently the printer is again started.

x: 0 = Normal speed (115200 baud, no handshake)
x: 1 = High speed (921600 baud (adjustable), RTS/CTS handshake)

Enquire high speed data connection

SOH	F	C	W	H	-	-	w	p	p	p	p	p	p	p	ETB

Answer

SOH	A	x	p	p	p	p	p	p	p	p	ETB

Set high speed baud rate

SOH	F	C	W	B	-	-	r	b	ETB

This setting is specified at the printer and if an active connection to the WLAN module exists, in the WLAN module, too. Subsequently the printer is again started.

b = Baud rate (115200, 230400, 460800, 921600)

Enquire high speed baud rate

SOH	F	C	W	B	-	-	w	p	p	p	p	p	p	p	p	ETB

Answert

SOH	A	b	p	p	p	p	p	p	p	p	ETB

10.2 Cutter

Set cutter mode

SOH	F	C	D	D	-	-	r	N	-	-	-	-	-	-	ETB

N: 0 = Cutter mode Off
N: 1 = Single cut
N: 2 = Mode 1 (without cutter offset), print number of pieces with cut after each label without backfeed
N: 3 = Mode 2 (with backfeed), print number of pieces with cut after each label with backfeed
N: 4 = Interval cut with final cut, transmit interval with later
N: 5 = Interval cut without final cut, transmit interval width later
N: 6 = Final cut (cut after print end)

Enquire cutter mode

SOH	F	C	D	D	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set cutter offset

SOH	F	C	S	C	A	-	r	V	N	N	N	-	-	-	-	ETB

V: pre-sign of offset (always +)
NNN: offset value, 3 digit ASCII number in 1/10 mm

Enquire cutter offset

SOH	F	C	S	C	A	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	V	N	N	N	-	-	-	-	p	p	p	p	p	p	p	-	ETB

Set double cut

SOH	F	C	S	C	B	-	r	V	N	N	N	-	-	-	-	ETB

V: pre-sign of offset (always +)
NNN: offset value, 3 digit ASCII number in 1/10 mm
0 = no double cut

Enquire double cut

SOH	F	C	S	C	B	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	V	N	N	N	-	-	-	-	p	p	p	p	p	p	p	-	ETB

Set cut width

SOH	F	C	S	C	C	-	r	N	N	N	-	-	-	-	-	ETB

NNN: Width in mm to cut the label
3 digit ASCII number in 1/10 mm

Enquire cut width

SOH	F	C	S	C	C	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	-	-	-	-	x	p	p	p	p	p	p	p	p	ETB

Set control

SOH	F	C	S	C	D	-	r	M	-	-	-	-	-	-	-	ETB

M: 0 = automatic cutter mode
M: 1 = external, cut can be effected by I/O

Enquire control

SOH	F	C	S	C	D	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	M	-	-	-	-	-	-	x	p	p	p	p	p	p	p	p	ETB

Set cutting speed

SOH	F	C	S	C	E	-	r	N	-	-	-	-	-	-	-	ETB

N: 0 = very slowly
N: 1 = slowly
N: 2 = normal
N: 3 = quick
N: 4 = very quick

Enquire cutting speed

SOH	F	C	S	C	E	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	-	-	-	-	x	p	p	p	p	p	p	p	p	ETB

Set automatic return On/Off

SOH	F	C	S	C	F	-	r	N	-	-	-	-	-	-	-	ETB

N: 0 = Off
N: 1 = On (default)

Enquire automatic return On/Off

SOH	F	C	S	C	F	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set mechanical distance between cutter and focal line

SOH	F	C	S	C	G	-	r	N	N	N	N	-	-	-	-	ETB

NNNN = Distance between cutter and focal line
in 1/10 mm (0 ... 9999)

Enquire mechanical distance between cutter and focal line

SOH	F	C	S	C	G	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	p	ETB

10.3 Dispenser I/O

Set dispenser mode

SOH	F	C	D	C	-	-	r	N	-	-	-	-	-	-	ETB

N: 0 = Dispenser mode Off
N: 1 = External I/O static
N: 2 = Dispenser photocell
N: 3 = External I/O static continuous
N: 4 = Dispenser photocell continuous
N: 5 = External I/O dynamic
N: 6 = External I/O dynamic continuous

Enquire dispenser mode

SOH	F	C	D	C	-	-	w	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set dispenser level photocell

SOH	F	C	C	F	-	-	r	V	N	N	-	-	-	-	-	ETB

V = pre-sign of offset (always +)
NN = offset value, 2 digit ASCII number in 1/10 Volt (5 … 40)

Enquire dispenser level photocell

SOH	F	C	C	F	-	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	V	N	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set sensitivity of dispenser photocell

SOH	F	C	C	F	A	-	r	N	N	N	-	-	-	-	-	ETB

NNN = Indication of photocell sensitivity
3 digit ASCII number (001 … 255)

Enquire sensitivity of dispenser photocell

SOH	F	C	C	F	A	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	V	N	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Enquire status of I/O inputs

SOH	F	C	M	D	A	-	w	p	p	p	p	p	p	p	ETB

Answer

SOH	A	1	2	3	4	5	6	7	8	p	p	p	p	p	p	p	p	ETB

Inputs 1-8 / IO port 1-8:

1 = Port active
0 = Port not active
- = Port not connected, signal blocked or output

Enquire status of I/O inputs

SOH	F	C	M	D	A	B	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	p	p	p	p	p	p	p	p	ETB

Inputs 1-16 / IO port 1-16:

1 = Port active
0 = Port not active
- = Port not connected, signal blocked or output

Enquire status of I/O outputs

SOH	F	C	M	D	B	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	1	2	3	4	5	6	7	8	p	p	p	p	p	p	p	p	ETB

Outputs 1-8 / IO port 9-16:

1 = Port active
0 = Port not active
- = Port not connected, signal blocked or input

Enquire status of I/O outputs

SOH	F	C	M	D	B	B	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	p	p	p	p	p	p	p	p	ETB

Outputs 1-16 / IO port 1-16:

1 = Port active
0 = Port not active
- = Port not connected, signal blocked or input

Set IN signal level

SOH	F	C	M	D	C	-	r	1	2	3	4	5	6	7	8	ETB

IO port 1-8 (dispenser inputs 1-8):

2 = Increased and decreased
1 = Increased
0 = Decreased
s = I/O signal by interface
x = I/O signal blocked

Only possible for IO ports that are specified as input.

Enquire IN signal level

SOH	F	C	M	D	C	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	1	2	3	4	5	6	7	8	p	p	p	p	p	p	p	p	ETB

Set IN signal level

SOH	F	C	M	D	C	B	r	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	ETB

IO port 1-16 (dispenser inputs 1-16):

2 = Increased and decreased
1 = Increased
0 = Decreased
s = I/O signal by interface
x = I/O signal blocked

Only possible for IO ports that are specified as input.

Enquire IN signal level

SOH	F	C	M	D	C	B	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	p	p	p	p	p	p	p	p	ETB

Set OUT signal level

SOH	F	C	M	D	D	-	r	1	2	3	4	5	6	7	8	ETB

IO port 9-16 (dispenser outputs 1-8):

1 = Signal level 1
0 = Signal level 0
s = I/O signal by interface
x = I/O signal blocked

Only possible for IO ports that are specified as output.

Enquire OUT signal level

SOH	F	C	M	D	D	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	1	2	3	4	5	6	7	8	p	p	p	p	p	p	p	p	ETB

Set OUT signal level

SOH	F	C	M	D	D	B	r	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	ETB

IO port 1-16 (dispenser output 1-16):

1 = Signal level 1
0 = Signal level 0
s = I/O signal by interface
x = I/O signal blocked

Only possible for IO ports that are specified as output.

Enquire OUT signal level

SOH	F	C	M	D	D	B	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	p	p	p	p	p	p	p	p	ETB

Set software input

SOH	F	C	M	D	F	-	r	1	2	3	4	5	6	7	8	ETB

IO port 1-8 (dispenser inputs 1-8):

1 = Set software input
0 = Delete software input
- = Ignore software input
P = Pulse, run software input once

Only possible for IO ports whose input signal levels are activated for interface.

Example: Activate a start impulse

```
(SOH)FCMDF-rP-------(ETB)
```

Set software input

SOH	F	C	M	D	F	B	r	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	ETB

IO port 1-16 (dispenser inputs 1-16):

1 = Set software input
0 = Delete software input
- = Ignore software input
P = Pulse, run software input once

Only possible for IO ports whose input signal levels are activated for interface.

An IO port that was set (1) must be deleted (0) first to activate a function when next setting (1).

Example: Activate a start impulse

```
(SOH)FCMDFBrP---------------(ETB)
```

Set software output

SOH	F	C	M	D	G	-	r	1	2	3	4	5	6	7	8	ETB

IO Port 9-16 (dispenser outputs 1-8):

1 = Set software output
0 = Delete software output

Only possible for IO ports whose output signal levels are activated for interface.

Set software output

SOH	F	C	M	D	G	B	r	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	ETB

IO Port 1-16 (dispenser outputs 1-16):

1 = Set software output
0 = Delete software output

Only possible for IO ports whose output signal levels are activated for interface.

Set dispenser offset

SOH	F	C	S	D	A	-	r	V	N	N	N	-	-	-	-	ETB

V = prefix of offsets (always +)
NNN = offset value, 3 digit ASCII number in 1/10 mm

Enquire dispenser offset

SOH	F	C	S	D	A	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	V	N	N	N	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set start signal delay

SOH	F	C	S	D	D	-	r	N	N	N	-	-	-	-	-	ETB

NNN = start signal delay in 1/100 s (0 … 999)

Enquire start signal delay

SOH	F	C	S	D	D	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set save start signal

SOH	F	C	S	D	E	-	r	N	-	-	-	-	-	-	ETB

N: 0 = Off
N: 1 = On

Enquire save start signal

SOH	F	C	S	D	E	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set cancel continuous printing (operating mode)

SOH	F	C	S	D	F	A	r	N	-	-	-	-	-	-	-	ETB

N: 0 = Off
N: 1 = On

Enquire cancel continuous printing (operating mode)

SOH	F	C	S	D	F	A	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Dispenser photocell

Enquire status of dispenser photocell

SOH	F	C	M	B	E	A	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

N: 0 = no label at photocell
N: 1 = label at photocell
The set switching threshold of dispenser photocell is taken into consideration.

10.4 Scanner

Set scanner operating mode

SOH	F	C	D	M	-	-	r	M	P	N	F	-	-	-	ETB

M: 0 = Scanner mode Off
M: 1 = Mode 1 (data comparison)
M: 2 = Mode 2 (check only readable)
M: 3 = Mode 3 (check readability, graphic)

P: 0 = Interface COM1
P: 1 = Interface COM2
P: 1 = This parameter is ignored as COM2 is always used as scanner interface at the moment.

N: – = 0 bad readings (NoReads)
N: 0 = 1 bad reading
N: 1 = 2 bad readings
N: 2 = 3 bad readings
N: 3 = 4 bad readings
N: 4 = 5 bad readings
N: 5 = 6 bad readings
N: 6 = 7 bad readings
N: 7 = 8 bad readings
N: 8 = 9 bad readings
Number of consecutive bad readings after which an error message appears.
At '-' (0 NoReads) no error message appears, i.e. the print is not interrupted. Only a warning is displayed at the screen.

F: 0 = No label feed (FeedLabel)
F: 1 = 1 label is fed
F: 2 = 2 labels are fed
F: 3 = 3 labels are fed
F: 4 = 4 labels are fed
F: 5 = 5 labels are fed

Enquire scanner operating mode

SOH	F	C	D	M	-	-	w	p	p	p	p	p	p	p	ETB

Answer

SOH	A	M	P	N	F	-	-	-	-	p	p	p	p	p	p	p	p	ETB

Set scan offset

SOH	F	C	D	M	A	-	r	N	N	N	N	-	-	-	-	ETB

N = scan offset in 1/10 mm

Enquire scan offset

SOH	F	C	D	M	A	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	p	ETB

N = current scan offset in 1/10 mm

Set scan length

SOH	F	C	D	M	B	-	r	N	N	N	N	-	-	-	-	ETB

N = scan length in 1/10 mm

Enquire scan length

SOH	F	C	D	M	B	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	p	ETB

N = current scan length in 1/10 mm

Set scan mode

SOH	F	C	D	M	C	-	r	N	N	N	N	-	-	-	-	ETB

N: 0 = scanning during printing
N: 1 = scanning after printing

Enquiere scan mode

SOH	F	C	D	M	C	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

N = current scan mode

Set scan delay (scanning after printing)

SOH	F	C	D	M	D	-	r	N	N	N	N	-	-	-	-	ETB

N = scan delay in ms [0 … 9990]

Enquire scan delay

SOH	F	C	D	M	D	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	p	ETB

N = current scan delay in ms

Set scan timeout (scanning after printing)

SOH	F	C	D	M	E	-	r	N	N	N	N	-	-	-	-	ETB

N = scan timeout in ms [0 … 9990]

Enquire scan timeout

SOH	F	C	D	M	E	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	p	ETB

N = current scan timeout in ms

Set scanner tpye

SOH	F	C	D	M	F	-	r	N	N	N	N	-	-	-	-	ETB

N: 0 = SICK CLP100
N: 1 = SICK CLV4XX
N: 2 = DATALOGIC DS2XXX
N: 3 = SICK ICR803
N: 4 = SICK ICR840

Enquire scanner type

SOH	F	C	D	M	F	-	w	p	p	p	p	p	p	p	p	ETB

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB

N = currently set scanner type

Scanner Variable

In mode 1 (data comparison) it is necessary to fix the order of bar code data to scann several codes onto one label. Because of this reason bar code data has to be defined as scanner variable in text sets. The text set has the following structure:

SOH	BM	[n]	=	S	V	(	a	;	f	)	text data	ETB

=SV: identification scanner variable
a: field active (0 = not active, 1 = active, i.e. code is scanned)
f: field number for definition of code order (1 …)

Examples:

Fixed text:
(SOH)BM[1]=SV(1;1)123456(ETB)

Variable text (counter):
(SOH)BM[1]=SV(1;1)=CN(10;0;4;+1;1)0001(ETB)

11 Configuration & Status

Save configuration permanent

In case you want to save the described settings permanent into the printer, then you have to transmit the following command to the printer.

SOH	F	X	-	-	-	-	r	N	-	-	-	-	-	-	-	ETB

N: 0 = save current parameter
N: 1 = set all parameters to default values
Then the printer performs a restart

Read configuration

SOH	F	X	-	-	-	-	w	-	-	-	-	-	-	-	-	ETB

The printer sends as answer all current settings as parameter sets.

Status enquiry

Host computer can receive information about the printer by the serial interface.
The status enquiry has the following data format:

SOH	S	ETB

Status return information

After receiving the status enquiry the printer sends the corresponding status return information.

Data format of status enquiry

SOH 1. Byte 2. Byte 5.-1. digit ETB
8 7 6 5 4 3 2 1 8 7 6 5 4 3 2 1

1. Byte	=	1. Status byte
		8. Bit = free 7. Bit = always set 6. Bit = free 5. Bit = 1 = running print order 0 = no. of items (0 = no print order) 4. Bit = 1 = press stop key 0 = not pressed stop key 3. Bit = cutter error (0 = no error; 1 = error) 2. Bit = label material (0 = no error; 1 = error) 1. Bit transfer ribbon (0 = no error; 1 = error)
2. Byte	=	2. Status byte
		8. Bit – 4. Bit = free 3. Bit = Compact Flash card 2. Bit = Mask set 1. Bit = Printhead temperature
5.-1. digit	=	number of pieces with 5 digits as ASCII characters min. '00000' / max. '65535'

11.1 Autostatus

The printers are equipped with an auto status function, i.e. in certain operating modes the printer actively sends the corresponding status. This can be enquired by the serial interface.

To activate the auto status, the host computer has to send the following command to the printer:

SOH	G	1. Byte	2. Byte	ETB

Each of the below indicated message which is observed and send by the printer has to be transmitted with a set Bit (see table below 1. Byte and 2. Byte) to the printer by means of auto state function. The printer sends after each performed condition the corresponding message (answer) to the host computer.

The following messages are provided:

1 **Start of generation**

2 **End of generation**
The printer sends this state in case data for a complete label was generated. The test print was not taken into consideration.
For counters/date variables the printer sends for each label a status cycle (start, end).

3 **Start of printing**

4 **End of printing**
The start of the print is send in case the generated data is send. The end of the print is send in case the print of the label is finished and the motor has stopped.

5 **Start of cutting**

6 **End of cutting**
This status describes the cutting. It can be checked for timeout and the end of the cut movement → error.

7 **Start of feeding**

8 **End of feeding**
This status is send in case an additional feeding (dispenser, cutter, tear off) is released.

9 **Start of a print order**

10 **End of print order**
This status signalizes the start and end of a complete print order (1…99999 labels). This status is active in all operating modes.

11 **Error**
This status message is send in case an error occurs.

12 **Printing stopped**
This message is send if the printing is stopped.

13 **Printing resumed**
This message is send if the printing is resumed.

The printer sends the auto status in the following format to the host computer:

SOH	G	1. Byte	2. Byte	ETB

1. Byte

8. Bit = start of generation
7. Bit = end of generation
6. Bit = start printing
5. Bit = end of print
4. Bit = start cutting
3. Bit = end of cut
2. Bit = start feeding
1. Bit = always 0

2. Byte

8. Bit = end of label feed
7. Bit = start of print order
6. Bit = end of print order
5. Bit = error
4. Bit = free
3. Bit = printing stopped
2. Bit = printing resumed
1. Bit = always 0

NOTICE!

Bit 1 has to be in1. Byte and 2. Byte always 0, otherwise the printer possibly could recognize SOH or ETB.

At the status message of the printer to the host computer always at least 1 Bit is set. However, it could be occur that several Bits are set at the same time.

At the status demand of the host computer to the printer it is also possible that several Bits are set at the same time.

The auto status demand is saved in the printer, i.e. it is set to 0 after switching off/on. Therefore it is necessary to demand it anew after each time the printer is switched on.

Example

The printer should observe the start of a print order. For this the host computer sends the following demand to the printer.

SOH	G	00000000	01000000	ETB

After the condition is fulfilled (= start of the print order) the printer sends the following message to the host computer:

SOH	G	00000000	01000000	ETB

With regard to the contents the answer corresponds always to the format set.

12 Monitored Printing

This protocol replaces the outdated Autostatus. In contrary to the Autostatus, this is not a binary protocol but a text-based protocol sending the commands as English clear text. The advantage is a very fast and simple error tracing and development. The disadvantage of a larger data volume plays nowadays a smaller role.

12.1 Short Introduction

In order to activate monitored printing:

(SOH)FHM---rSE(ETB)

(SOH)FHA---r2(ETB)

12.2 Parameter Sets (Host – Printer)

Formatting: # - SOH * - ETB

Command: Set monitoring mode.
Syntax: #FHM---r*SEPnnnCnFn**
Example: #FHM---rSP10E*
Description: Activates the forwarding of certain events to the server. The results are:

S - (start/stop): print start, print end, stop printing, continue printing, cancel printing.

E – (error): Error occurred, error confirmed.

C – (photocell): Activates the photocell test (n=1)/disable (n=0)

F – Activates the encoder profile (n=1)/disable (n=0)

P – (progress): Print progress, indicates the number of already printed labels. In standard case, the interval between two events is a label. If a number behind the flag is indicated, an event every *nnn* labels is released (see example). With column printing the event is released, as soon as the entered interval was reached or exceeded for the first time (example: 3 columns, interval 4, 20 labels in total. Event at label 6,9,12 and 18).

Command: Activate, disable the monitoring.
Syntax: #FHA---r*n**
Example: #FHA---r2*
Description: activated, deactivates the monitoring (n=[0,2]);
‚0' – enables the monitoring after completion of print order,
‚1' – reserved
‚2' – activates the monitoring for the current port.

12.3 Direct Enquiry

Command: Requests print status.
Syntax: #FHS---r*
Example: #FHS---r*
Description: Invites the client to send the current status.

Command: User command to the sender of print order.
Syntax: #FHU---r*Daten**
Example: #FHU---rSE*
Description: Sends #*Data** to the sender of print order.
Max 100 characters.

12.4 Answer Sets (Printer – Host)

Event: Print start
Set: #HSStart-*Pagename-Labelsrequested**
Example: #HSStart-NoName1-100*
Description: Indicates the start of a print order, including page name and number of labels to be printed.

Event: Printing completed
Set: #HSDone-*Pagename-Labelsprinted**
Example: #HSDone-NoName1-100*
Description: Indicates the completion of a print order including page name and number of printed labels.

Event: Printing stopped
Set: #HSHold-*Pagename-Labelsprinted**
Example: #HSHold-NoName1-10*
Description: Indicates the stopping of print order including page name and number of printed labels. Occurs when the user stopped the print order and/or after occurance of an error.

Event: Continue printing
Set: #HSContinue-*Pagename-Labelsprinted**
Example: #HSContinue-NoName1-55*
Description: Indicates the continuation of print order including page name and number of printed labels. Occurs when the user restarts the print order.

Event: Cancel printing
Set: #HSAborted-*Pagename-Labelsprinted**
Example: #HSAborted-NoName1-57*
Description: Indicates the cancelation of printing including page name and number of printed labels.

Event: Error
Set: #HSError-*Pagename-Labelsprinted-ErrorID-Errormessage**
Example: #HSError-NoName1-57-28-Messerfehler*
Description: Indicates the occurance of an error including page name, number of printed labels, error ID and error text.

Event: Error confirmation at printer
Set: #HSAck-*Pagename-Labelsprinted* *
Example: #HSAck-NoName1-57*
Description: Indicates the confirmation of an error including page name and number of printed labels.

Event: Print progress
Set: #HSProgress-*Pagename-Labelsprinted* *
Example: #HSProgress-NoName1-60*
Description: Indicates the progress of print order including page name and number of printed labels. This event is also returned as answer to status enquiry, if the printer is printing.

Event: Photocell value
Set: #HSPhotocell-DLS:xxx-RLS:xxx*
Example: #HSPhotocell-DLS:3.8-RLS:1.9*
Description: Returns the values of transmission and reflexion photocell. The verification takes place every 5 ms; only changes are sent.

Event: Encoder profile
Set: # HSEnc-Dist:xxx-Speed:xxx*
Example: # HSEnc-Dist:120-Speed:202*
Description: Generates the profile of speed development of the packaging machine during a print order.

Event: Answer to status enquiry (#FHS---r*)
Description: The respective current print event is returned.

12.5 Sample Label

A simple label with monitoring of all parameters with output of the progress – all 10 labels could look as following:

```
FHM---rSP10E
//Ueberwachung einschalten
FHA---r2
// JOBNAME: "ETIKETT1"
FBE---rETIKETT1
// TYPE: Endlosetiketten
// HEIGHT: 20.00 mm
// GAPLENGTH: 2.00 mm
// COLUMNS: 1
// COLUMN DISTANCE: 100.00 mm
FCDA--r1-------
FCCL--r0002000-
FCCM--r00000---
FCCHA-r1-------
FCCHB-r999-----
// SPEED: 50 mm/s
FCAA--r050-----
// CONTRAST: 200%
FCAB--r200-----
// LABELCONTROL: 0
FCDE--r0-------
// RIBBONCONTROL: 1
// RIBBONSENS: 0
FCDB--r10------
// MATERIAL: Typ 1
FCDNA-r0-------
FCDNB-r1-------
FCDNC-r0000----
// SCAN MODE: 0
// SCAN PORT: 0
// NO READ: 0
// FEED LABEL: 0
FCDM--r0000----
// MIRROR LABEL: Nein
FCDO--r0-------
// TEXT (1/100 mm)
AM[1]1407;6907;0;4;0;3;398;398;8
BM[1]Test
// SETLINENO: 1 lines
FBAA--r1
// SETCOPIES: 1
FBBA--r00050---
// PRINT
FBC---r--------
```

The server output, for example, looks as follows:

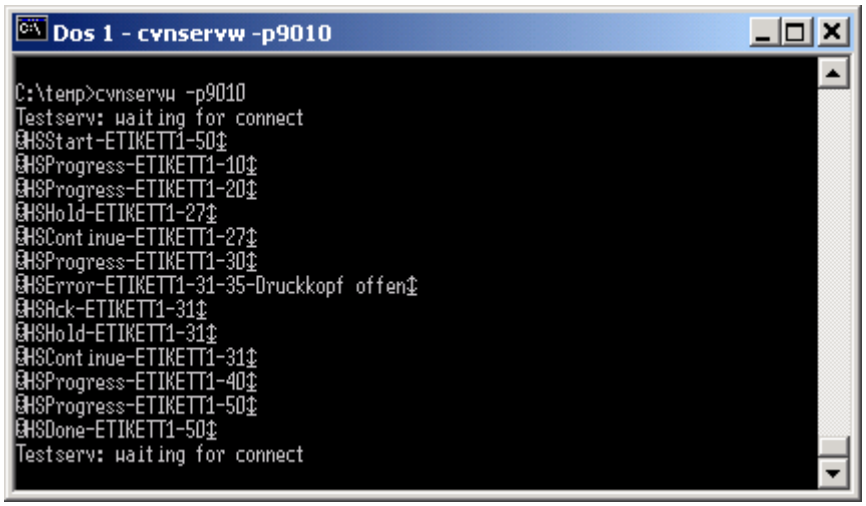

13 Font Examples

13.1 Bitmap Fonts (Not Proportional)

13.2 Bitmap Fonts (Proportional)

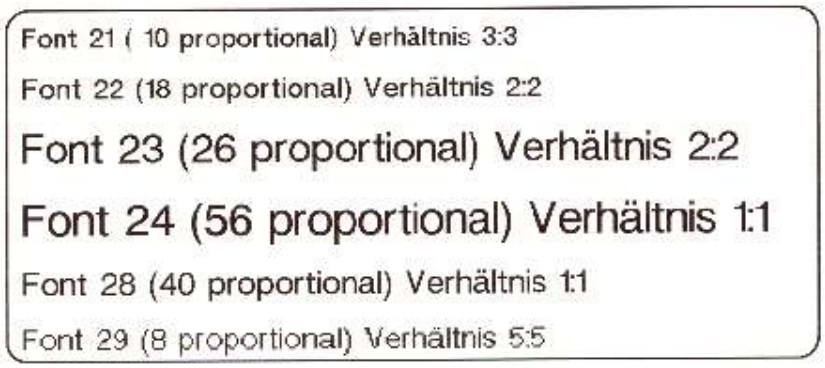

13.3 Vector Fonts

14 Index

#

∗FBAA, number of lines ... 90
∗FBBA, total items of print order ... 91
∗FBBB, labels still to print ... 91
∗FBBC, already printed labels ... 91
∗FBBD, interval (cutter) ... 91
∗FBC, start printing ... 92
∗FBD,start printing (w/o tear-off offset ... 92
∗FBE, start printing (assign printjob identifier) ... 92
∗FBF, initialisation of page handling ... 92
∗FBG, selection of current page ... 92
∗FBH, order of pages ... 92
∗FBI, generation of page w/o print start ... 92
∗FCAA, print speed ... 61
∗FCAB, contrast ... 56
∗FCB, measure label ... 53
∗FCCA, label synchronization at switching on ... 66
∗FCCB, buzzer ... 64
∗FCCD, y offset ... 73
∗FCCE, x offset ... 73
∗FCCF, dispenser level photocell ... 102
∗FCCFA, sensitivity dispenser photocell ... 102
∗FCCG, tear off offset ... 73
∗FCCHA, column printing (no. of columns) ... 55
∗FCCHB, column printing (column width) ... 55
∗FCCJ, alignment ... 55
∗FCCK, keyboard layout ... 64
∗FCCL, label length ... 54
∗FCCM, gap length ... 54
∗FCCN, codepage ... 63
∗FCCO, label width ... 54
∗FCCP, external printer parameters ... 62
∗FCCR, zero point adjustment (x value) ... 75
∗FCCR, zero point adjustment (y value) ... 75
∗FCDA, label type ... 53
∗FCDB, transfer ribbon control ... 61
∗FCDC, operating mode (dispenser I/O) ... 102
∗FCDD, operating mode (cutter) ... 99
∗FCDE, label photocell ... 53
∗FCDEA, scan position ... 57
∗FCDEB, sensitivity transmission photocell ... 58
∗FCDEC, sensitivity reflexion photocell ... 58
∗FCDGA, label error length ... 54
∗FCDGB, synchronization ... 55
∗FCDI, printer language ... 62
∗FCDJ, ribbon saving ... 61
∗FCDJC, CMI length ... 66
∗FCDK, field handling ... 62
∗FCDM, scanner operating mode ... 108
∗FCDMA, scan offset ... 108
∗FCDMB, scan length ... 109
∗FCDMC, scan mode ... 109

∗FCDMD, scan delay 109
∗FCDME, scan timeout 109
∗FCDMF, scanner type 110
∗FCDN, rotate label 56
∗FCDNC, material selection 57
∗FCDND, rotate label in 90 degrees 57
∗FCDO, flip label 56
∗FCDS, flip/rotate label 56
∗FCDU, customized entry 63
∗FCDW, hotstart 64
∗FCDX, autoload 65
∗FCFF, interface parameters 67
∗FCGC, SOH/ETB 67
∗FCGD, data memory 68
∗FCGEA, reaction unknown questions 68
∗FCHA, paper counter printer 79
∗FCHB, paper counter printhead 79
∗FCIA, date 80
∗FCIB, time 80
∗FCIG, automatic clock adjustment 81
∗FCIH, beginning of summertime 82
∗FCII, end of summertime 82
∗FCIJ, time shifting 82
∗FCKA, password 83
∗FCKB, function group (password) 83
∗FCKC, password active/inactive 84
∗FCKDA, password function menu 84
∗FCKDB, password favorites menu 84
∗FCKDC, password memory card 84
∗FCKDD, password printing manually 85
∗FCLA, IP address (network) 69
∗FCLB, netmask (network) 69
∗FCLC, gateway address (network) 69
∗FCLD, transmission mode (network) 70
∗FCLE, DHCP support (network) 70
∗FCLF, printer name (network) 70
∗FCLMB, MAC address (network) 70
∗FCLNI, NTP server IP (network) 71
∗FCLNS, NTP status (network) 72
∗FCLNZ, time zone (network) 72
∗FCLZ, reset network device (network) 72
∗FCMAA, label parameter a 59
∗FCMAB, label parameter b 59
∗FCMAC, label parameter c 59
∗FCMBA, transfer ribbon photocell 59
∗FCMBB, label photocell 60
∗FCMBC, close printhead 76
∗FCMBC, printhead photocell 60
∗FCMBD, open printhead 76
∗FCMBEA, dispenser photocell 60, 107
∗FCMC, printhead temperature 77
∗FCMCA, printhead locking 76
∗FCMDA, I/O inputs 103
∗FCMDAB, I/O inputs 103
∗FCMDB, I/O outputs 103
∗FCMDBB, I/O outputs 103
∗FCMDC, in signal level 104

∗FCMDCB, in signal level ... 104
∗FCMDD, out signal level ... 104
∗FCMDDB, out signal level ... 105
∗FCMDF, software input ... 105
∗FCMDFB, software input ... 105
∗FCMDG, software output ... 106
∗FCMDGB, software output ... 106
∗FCMG, printhead resistance ... 78
∗FCMH, reset error ... 90
∗FCMHA, error ID/error text ... 90
∗FCMKC, online/offline ... 75
∗FCMKD, reprint action ... 76
∗FCMKE, standard label ... 65
∗FCMLA, ribbon prior warning ... 77
∗FCMLB, ribbon prior warning diameter ... 77
∗FCMLC, ribbon diameter ... 77
∗FCMLDA, mode (ribbon prior warning) ... 78
∗FCMLDB, reduced speed (ribbon prior warning) ... 78
∗FCMP, winder output ... 76
∗FCMQ, status print ... 93
∗FCMRA, backfeed operating mode ... 65
∗FCMRB, backfeed delay ... 65
∗FCMT, print length correction ... 78
∗FCNRA, custom logo ... 79
∗FCSCA, offset (cutter) ... 99
∗FCSCA, offset cutter ... 74
∗FCSCB, double cut (cutter) ... 99
∗FCSCC, cut width (cutter) ... 100
∗FCSCD, control (cutter) ... 100
∗FCSCE, cutting speed (cutter) ... 100
∗FCSCF, automatic return (cutter) ... 100
∗FCSCG, distance cutter-focal line (cutter) ... 101
∗FCSDA, offset (dispenser I/O) ... 106
∗FCSDA, offset dispenser ... 74
∗FCSDD, start signal delay ... 106
∗FCSDE, save start signal ... 107
∗FCSDFA, continuous printing (operating mode) cancel ... 107
∗FCSDFC, label change confirmation ... 66
∗FCWB, high speed baud rate (WLAN) ... 98
∗FCWC, connection status ... 95
∗FCWD, DHCP support ... 95
∗FCWE, encryption type (WLAN) ... 95
∗FCWF, MAC address (WLAN) ... 95
∗FCWG, gateway address (WLAN) ... 96
∗FCWH, high speed data connection (WLAN) ... 98
∗FCWI, IP address (WLAN) ... 96
∗FCWK, WPA/WPA2 encryption (WLAN) ... 96
∗FCWM, netmask (WLAN) ... 96
∗FCWP, server port (WLAN) ... 96
∗FCWR, readout and transfer configuration (WLAN) ... 97
∗FCWS, SSID identification (WLAN) ... 97
∗FCWV, WEP64 encryption (WLAN) ... 97
∗FCWW, WEP128 encryption (WLAN) ... 97
∗FCWX, save settings and restart (WLAN) ... 97
∗FD, start/stop command ... 90
∗FE, feed ... 93
∗FF, test print ... 93

∗FGA, cancel print order 93
∗FMA, save label (CF card) 86
∗FMB, load file (cf card) 86
∗FMC, delete layout (cf card) 86
∗FMD, format (cf card) 86
∗FMG, table of contents (cf card) 86
∗FMH, memory space (cf card) 87
∗FMI, create directory (cf card) 87
∗FMJ, delete directory (cf card) 87
∗FMJA, delete directory path (cf card) 87
∗FMK, change directory (cf card) 87
∗FMKB, standard directory via I/O (cf card) 88
∗FML, transfer file (cf card) 88
∗FMM, enquiry if the file exists (carte cf) 88
∗FMP, size ofcfF card 88
∗FMS, drive status (Ccfcard) 89
∗FZ, emulation 93

A

autoload 65

B

backfeed
  delay 65
  operating mode 65
buzzer 64

C

clock adjustment, automatical
  beginning of summertime 82
  end of summertime 82
  time shifting 82
codepage 63
column printing 55
compact flash card
  change directory 87
  create directory 87
  delete directory 87
  delete directory path 87
  delete layout 86
  drive status 89
  enquiry if the file exists 88
  format card 86
  load file 86
  readout free memory space 87
  save label 86
  size of cf card 88
  standard directory via I/O 88
  transfer file 88
configuration and status
  autostatus 112, 113
  saving 111
  status enquiry 111
  status return information 111
configuration, readout and transfer (WLAN) 97
connection status (WLAN 95
contrast 56
custom logo 79
customized entry 63

cutter
automatic return ... 100
control ... 100
cut width ... 100
cutting speed ... 100
distance cutter-focal line ... 101
double cut ... 99
mode ... 99
offset ... 74, 99

D

data format
explanation ... 12
field attributes ... 13
field name ... 14, 15, 16, 17, 18
field properties ... 13
general information ... 11
Data format
Field selection ... 18
data memory ... 68
date/time
automatic clock adjustment ... 82
automatical clock adjustment ... 81
date ... 80
time ... 80
datum point (text, bar code, graphic) ... 9
DHCP support
network ... 70
WLAN ... 95
dispenser I/O
continuous printing (operating mode) ... 107
dispenser level photocell ... 102
dispenser photocell ... 107
I/O inputs ... 103
I/O outputs ... 103
in signal level ... 104
mode ... 102
offset ... 106
out signal level ... 104, 105
save start signal ... 107
sensitivity dispenser photocell ... 102
software input ... 105
software output ... 106
start signal delay ... 106
dispenser photocell ... 60
double cut, parameter set ... 99

E

emulation ... 93
encryption (WLAN)
type ... 95
WEP128 ... 97
WEP64 ... 97
WPA/WPA2 ... 96
external printer parameters ... 62

F

feed ... 93
field handling ... 62
flip label ... 56

font examples
bitmap fonts (not proportional) 119
bitmap fonts (proportional) 119
font examples.vector fonts 119
format identifier, date/time 41, 42, 43

G

gap length 54
gateway address
network 69
WLAN 96
generation, selected page 92
graphic set
general graphic format 35
PCX format 35, 36

H

high speed data connection (WLAN) 98
highspeed baud rate (WLAN) 98
hotstart 64

I

in signal level (dispenser I/O) 104
initialisation of page handling 92
inputs I/O (dispenser I/O) 103
interface
parameters 67
SOH/ETB 67
IP address
network 69
WLAN 96

K

keyboard layout 64

L

label
alignment 55
column printing 55
flip 56
label change confirmation 66
label error length 54
label photocell 53, 60
Label type 53
length 54
measure 53
rotate 56
standard label 65
synchronization at switching on 66
width 54
label parameters
column printing 55
contrast 56
flip label 56
gap length 54
label alignment 55
label error length 54
label length 54
label photocell 53

label rotation in 90 degrees 57
label type 53
label width 54
level maximal (label parameter b) 59
material selection 57
measure label 53
reflexion transmission photocell 58
rotate label 56
scan position 57
sensitivity transmission photocell 58
synchronization 55
label photocell
level minimal (label parameter b) 59
switching threshold (label parameter c) 59
label rotation in 90 degrees 57
line number 90

M

MAC address
network 71
WLAN 95
mask set
bar code Aztec code 30
bar code CODABLOCK F 27
bar code DataMatrix 25
bar code GS1 DataMatrix 26
bar code MAXICODE 24
bar code PDF417 23
bar code QR Code 29
bar code, GS1 DataBar (RSS) 28
bar code, ITF 22
bar code, one-dimensional 21
internal graphic 32
line 31
rectangle 31
text 19, 20
material selection 57
measure, label 53
monitored printing 115, 116, 117, 118

N

netmask
network 69
WLAN 96
network
DHCP support 70
gateway address 69
IP address 69
MAC address 71
netmask 69
NTP server IP 71
NTP status 72
printer name 70
reset network device 72
time zone (hour offset) 72
transmission mode 70
NTP server IP 71
NTP status 72

O

offset values
cutter ... 74
dispenser ... 74
tear off offset ... 73
x offset ... 73
y offset ... 73
online/offline ... 75
order (pages to print) ... 92
out signal level (dispenser I/O) ... 104, 105
outputs I/O (dispenser I/O) ... 103

P

paper counter
printer ... 79
printhead ... 79
parallel data transmission, connection plan ... 7
parameter sets
compact flash card ... 86, 87, 88, 89
data memory ... 68
date/time ... 80, 81, 82
emulation ... 93
Interface ... 67
interface protocol ... 67
label parameters ... 53, 54, 55, 56, 57, 58
network ... 69, 70, 71
offset values ... 73
password ... 83, 84, 85
password favorites menu ... 84
password function menu ... 84
password memory card ... 84
password printing manually ... 85
photocells ... 59, 60
printer parameters ... 61, 62, 63, 64, 65, 66
printing ... 90, 91, 92, 93
service functions ... 77, 78
service funtions ... 75, 76
parameter sets (options)
cutter ... 99, 100
dispenser I/O ... 102, 103, 104, 105, 106, 107
scanner ... 108, 109, 110
WLAN ... 95, 96, 97, 98
password ... 83, 84, 85
photocell
dispenser photocell ... 60
label photocell ... 60
level maximal (label parameter a) ... 59
level minimal (label parameter a) ... 59
printhead photocell ... 60
switching threshold ... 59
transfer ribbon photocell ... 59
photocell, label photocell ... 53
print length correction ... 78
print order, cancel ... 93
print speed ... 61
printer
language ... 62
name ... 70

printer parameters
autoload ... 65
backfeed, delay ... 65
backfeed, operating mode ... 65
buzzer ... 64
CMI length ... 66
codepage ... 63
customized entry ... 63
external printer parameters ... 62
field handling ... 62
hotstart ... 64
keyboard layout ... 64
label change confirmation ... 66
label synchronization at switching on ... 66
print speed ... 61
printer language ... 62
ribbon saving ... 61
standard label ... 65
transfer ribbon control ... 61
printhead
down (closed) ... 76
locking ... 76
resistance ... 78
temperature ... 77
up (open) ... 76
printhead photocell ... 60
printing
cancel print orders ... 93
feed ... 93
generation of selected page ... 92
initialisation of page handling ... 92
Item number of print order ... 91
number of lines ... 90
print order ... 92
reset error ... 90
selection of current page ... 92
start printing ... 92
start/stop command ... 90
status printing ... 93
test print ... 93
printing, start ... 92

R

reaction, unknown questions ... 68
reprint action ... 76
reset error ... 90
reset network device ... 72
ribbon saving ... 61
rotate label ... 56
rotation (text, bar code, graphic) ... 9

S

save settings and restart (WLAN) ... 97
scan position ... 57
scanner
operating mode ... 108
scan delay ... 109
scan length ... 109
scan mode ... 109

scan offset ... 108
scan timeout ... 109
scanner type ... 110
scanner variable ... 110
sensitivity reflexion photocell ... 58
sensitivity transmission photocell ... 58
serial data transmission
connection plan RS232 ... 6
connector assignment ... 5
server port (WLAN) ... 96
service functions
custom logo ... 79
online/offline ... 75
print length correction ... 78
printhead down (closed) ... 76
printhead locking ... 76
printhead resistance ... 78
printhead temperature ... 77
printhead up (open) ... 76
reprint action ... 76
transfer ribbon prior warning ... 77
transfer ribbon prior warning, diameter ... 77
transfer ribbon prior warning, mode ... 78
transfer ribbon prior warning, reduced speed ... 78
winder output ... 76
zero point adjustment (x value) ... 75
zero point adjustment (y value) ... 75
software input (dispenser I/O) ... 105
software output (dispenser I/O) ... 106
SOH/ETB ... 67
Speed ... 61
SSID identification (WLAN) ... 97
standard label ... 65
start/stop command ... 90
status print ... 93
switching threshold, photocell ... 59
synchronization ... 55
synchronization at switching on ... 66

T

tear off offset ... 73
test print ... 93
text set
example ... 34
general information ... 33
time zone (hour offset) ... 72
transfer ribbon photocell ... 59
transfer ribbon prior warning ... 77
diameter ... 77
mode ... 78
reduced speed ... 78
transmission mode ... 70

V

variables
check digit ... 50
counter ... 38
counter, extended ... 39
currency variable ... 44
date/time ... 40, 41, 42, 43

EPC (Electronic Product Code) ... 49
GS1-128 parser ... 48
link field ... 37
memory card data ... 48
set structure ... 37
shift variable ... 45
substring ... 51
user guiding ... 46
user guiding with mask ... 47

W

winder output ... 76
WLAN
connection status ... 95
DHCP support ... 95
encryption type ... 95
gateway address ... 96
high speed baud rate ... 98
high speed data connection ... 98
IP address ... 96
MAC address ... 95
netmask ... 96
readout and transfer configuration ... 97
save settings and restart ... 97
server port ... 96
SSID identification ... 97
WEP128 encryption ... 97
WEP64 encryption ... 97
WPA/WPA2 encryption ... 96

X

x offset ... 73

Y

y offset ... 73

Z

zero point adjustment (x value) ... 75
zero point adjustment (y value) ... 75

REDEMAC
3540 Griffith St, Saint-Laurent, Quebec H4T 1A7
Phone: (888) 335-9570

www.redemac.com
request@redemac.com