

The **<Intervall time>** mode (202) enables the entry of start and limit times at which the LEIBINGER-JET 2 switches itself on or off automatically for circulation of the ink (e.g.: at 10.25 hours the device switches **on** / at 10.40 hours the device switches **off**).


This function prevents the drying of the ink and the jets becoming stuck up during operation interruptions.

At the same time the set values are displayed in all above mentioned fields.

7.7.6.7 Touch screen calibration

Figure 101

The touch field **<touch adjust>** (220) opens the calibration menu **<E59>**.

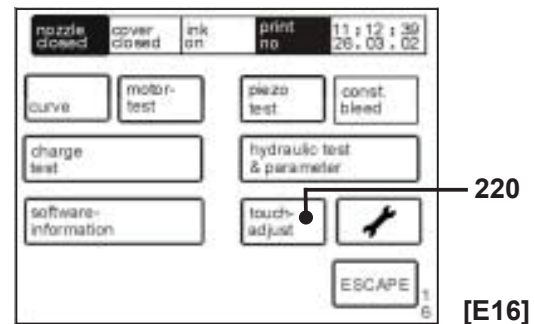

The display is adjusted with the **<adjust>** field (221) and by tapping on the upper calibration point (222) and by subsequent tapping on the lower calibration point (222). The storage is performed with the touch field **<save>** (223).

The calibration points are shown as small squares □.

